




# Umbrella Stroller

## INSTRUCTION MANUAL

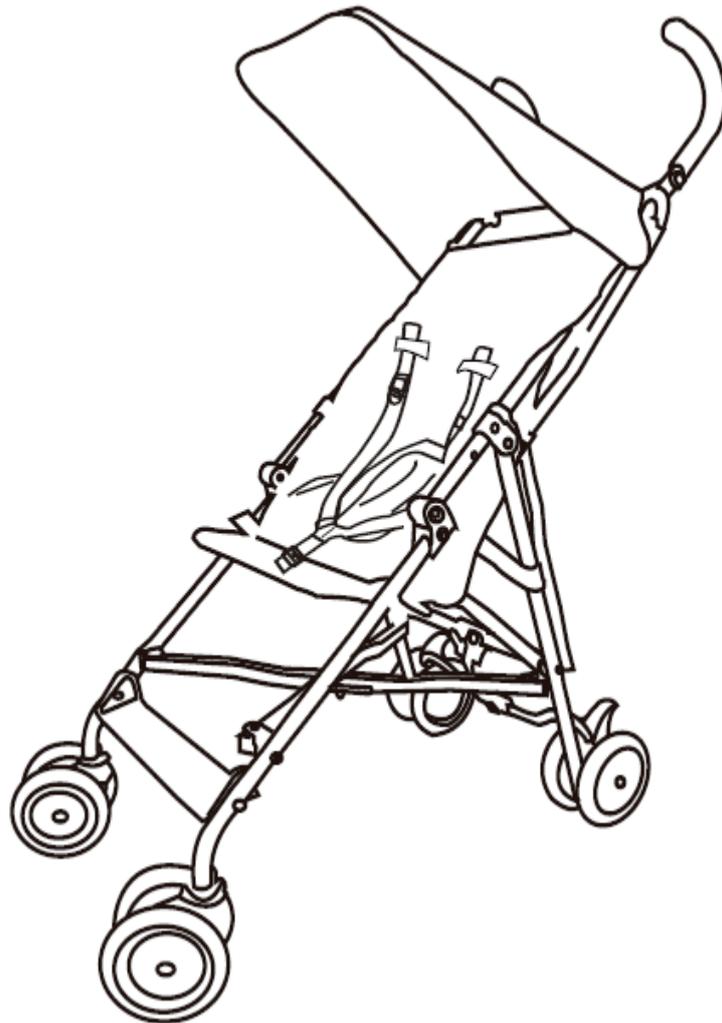

**Complies with Australia/New Zealand Standard AS/NZS 2088:2013**

**IMPORTANT:**

Thank you for choosing our product. Please read and understand these instructions before using this umbrella stroller. If in doubt, please seek help from our Customer Service Team.

**Please retain the instructions for future reference.**

*Images in this manual are representative only. Actual product may vary. The manufacturer reserves the right to change specifications without prior notice.*

# SAFETY

---

THANK YOU FOR CHOOSING OUR PRODUCT. PLEASE TAKE TIME TO READ THE IMPORTANT SAFETY NOTES BELOW. THIS WILL ENSURE MANY YEARS OF HAPPY AND SAFE USE.



## **WARNING:**

### **WARNING: TO AVOID INJURY OR DEATH:**


- **ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE THE CHILD IS CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.**
- **NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.**

- This stroller is suitable for children aged 7-36 months old, up to a maximum weight of 15kg.
- Periodically check the stroller parts for wear or damage. If this is found, do not use the stroller. Lubricate moving parts and ensure they can move freely.
- Only spare parts and accessories approved by the manufacture may be used with the stroller.
- Do not modify or alter the stroller and harness in any way – this will affect the safety of the stroller.
- Never leave the harness buckled when not fitted to a child – loops may be formed that could pose a strangulation hazard.
- This stroller is designed for use on flat or gently sloping ground. It may be unstable on greatly sloping or uneven ground.
- This stroller is **not** suitable for use when jogging or skating.

## To Open:

Flip open the plastic locking hook **A** on the right hand side and tip the Stroller forwards to partially open it. **See Fig 1.** Pull the two handgrips apart and push down on the lower locking bar **B1** and it will fully open, and the locking bar will engage. Push down on the secondary lock **C** and engage it. **See Fig 2.**


Flip the hood over to the front of the Stroller.

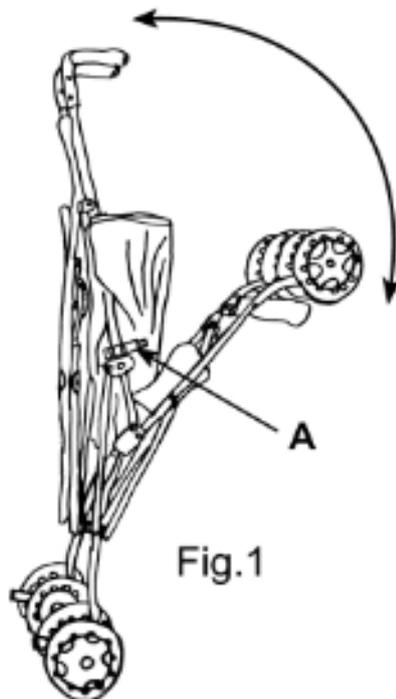

## To Fold:

Pull the hood over to the back of the Stroller. Push the safety latch **B2** underneath the locking bar **B1** forward to unlock it and then lift the locking bar upwards. **See Fig 2.**

Release the secondary lock **C** by pulling the knob upwards. Push both handgrips together and forwards to fold the Stroller. Refasten the plastic locking hook **A**.

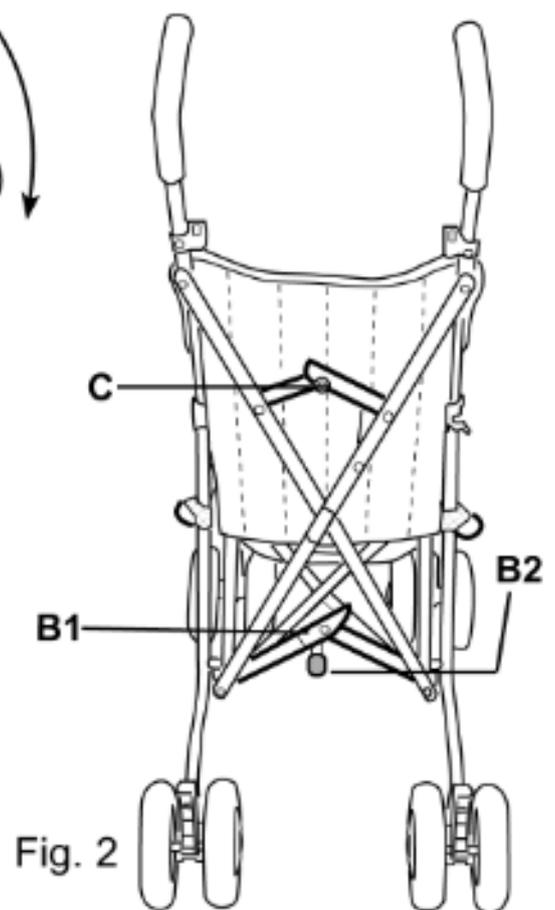

# Apply And Release The Brakes


This Stroller has independent brakes on the two rear wheels. These are operated by the red levers between the dual wheels.

## To apply the brakes:

Press down on each lever **D** with your toe until you feel it snap into engagement. It may be necessary to push the Stroller back and forth slightly to get the lever into the engagement slot on the wheel.

## To release the brakes:


Lift the brake levers **D** upwards with your toe.

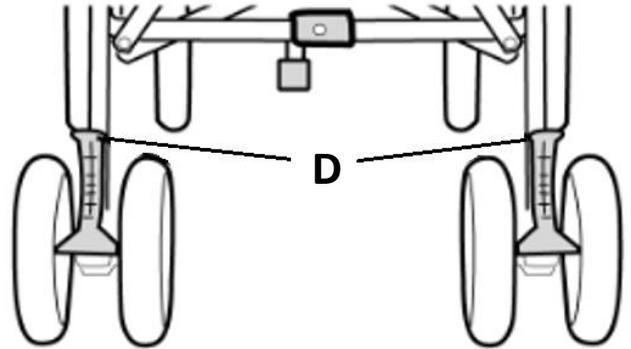

# Tether Strap:

Place a hand through the tether strap on the handle to ensure the stroller does not roll away.

**WARNING: USE THIS TETHER STRAP AT ALL TIMES**

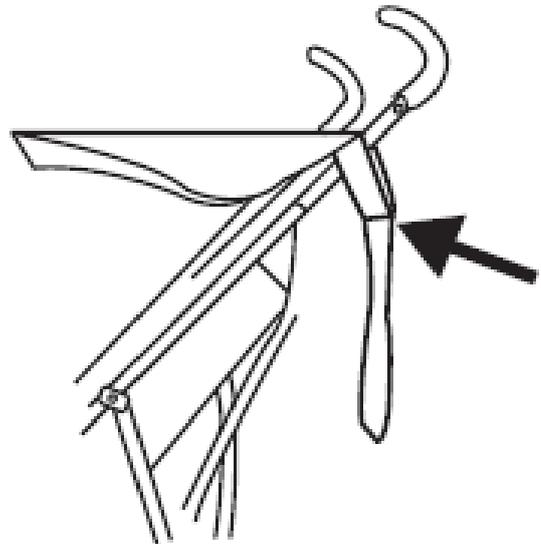


# Attaching And Checking The Safety Harness:


This Stroller has a 5 point harness for restraining your child.

## **WARNING: USE THIS HARNESS AT ALL TIMES**


**To Open:** Press the clips **E** and pull the waist & shoulder belts out of the buckle **F**.

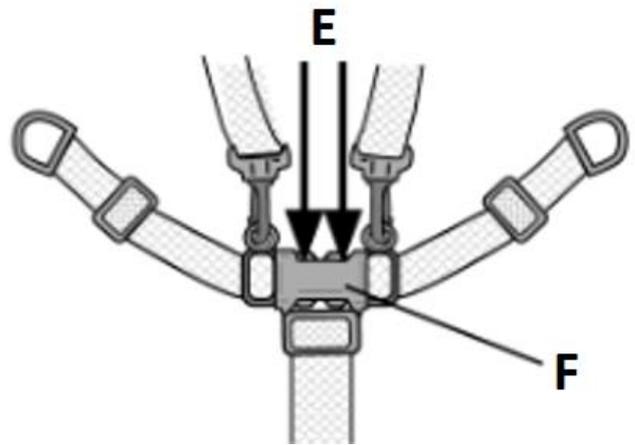

**To Close:** Push the clips of the waist & shoulder straps into the buckle until they click into place.

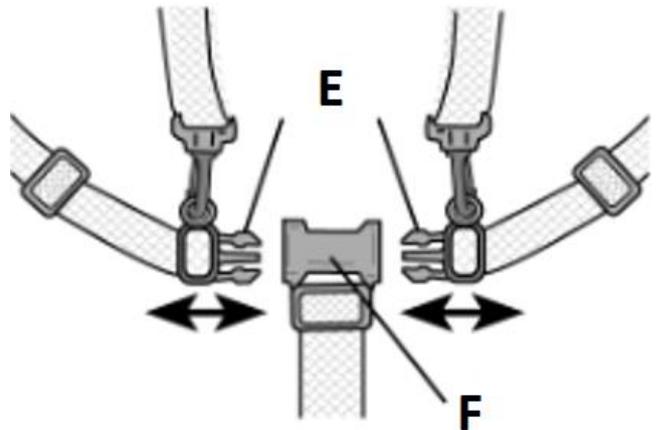

**To Adjust:** Move the slide adjuster buckles **G** on the waist, shoulder and crotch straps in or out, so that your child is held snugly in the harness.

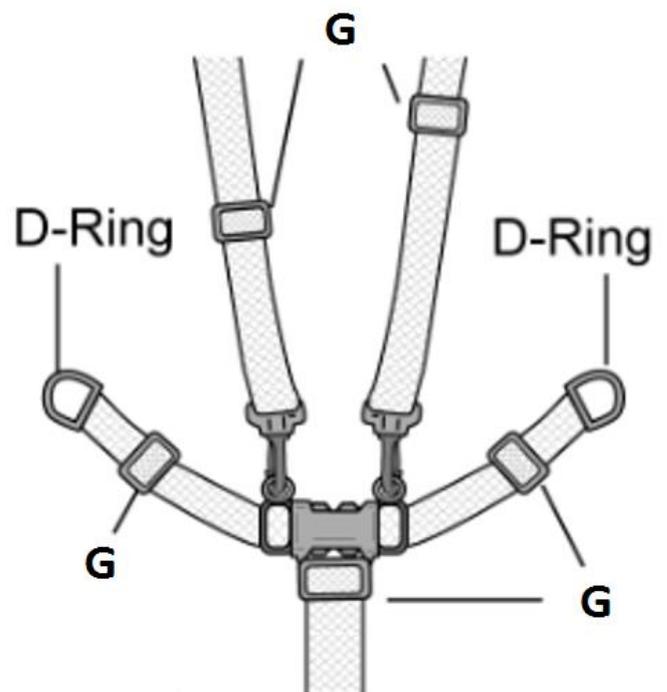

# CARE AND MAINTENANCE

---

Lubricate moving parts regularly, especially the wheels and lower parts of the frame that tend to collect dirt.

## **Inspect regularly for:**

- Worn parts, torn materials or stitching.
- Loose screws, bent or broken frame parts.
- Broken damaged or missing parts.

Should any of the above become evident, do not use the Stroller.

## **Care:**

Fabric parts may be cleaned in accordance with the fabric care labels. Do not machine wash.

Seat: Sponge clean only.

Canopy: Hand wash only.

Do not leave the Stroller exposed to heat, i.e. by a radiator or in direct sunlight.

If the Stroller chassis parts have been exposed to salt water, we recommend that they be rinsed down with soapy water as soon as possible. Afterwards, clean with a sponge.

Do not fold or store the product while it is wet and never store in damp environment, as this can cause mildew on the fabric parts.

Made in China

*Manufactured for:*  
The Warehouse Ltd  
26 The Warehouse Way,  
Northcote, Auckland.  
0800 422 274