


INSTRUCTION MANUAL FOR SRO6151

WARNINGS

This speaker is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.

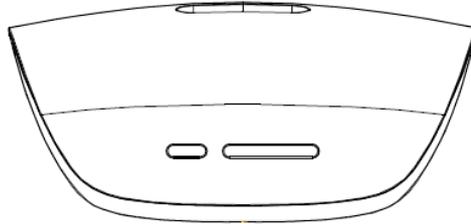


I. Precautions

1. Please store and use this product at the ambient temperature;
2. Do not expose this product to the rain or damp surroundings;
3. Prevent this product from falling that could result in serious damage;
4. Do not dismantle, repair or modify this product on your own;
5. To avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery.

II. Considerate Hints

1. Do not turn up the volume to a high level constantly as this could shorten the service life of this product or impair your hearing;
2. When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components;
3. The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.
4. Please remove audio cables for the use of Bluetooth.

III. Functional buttons

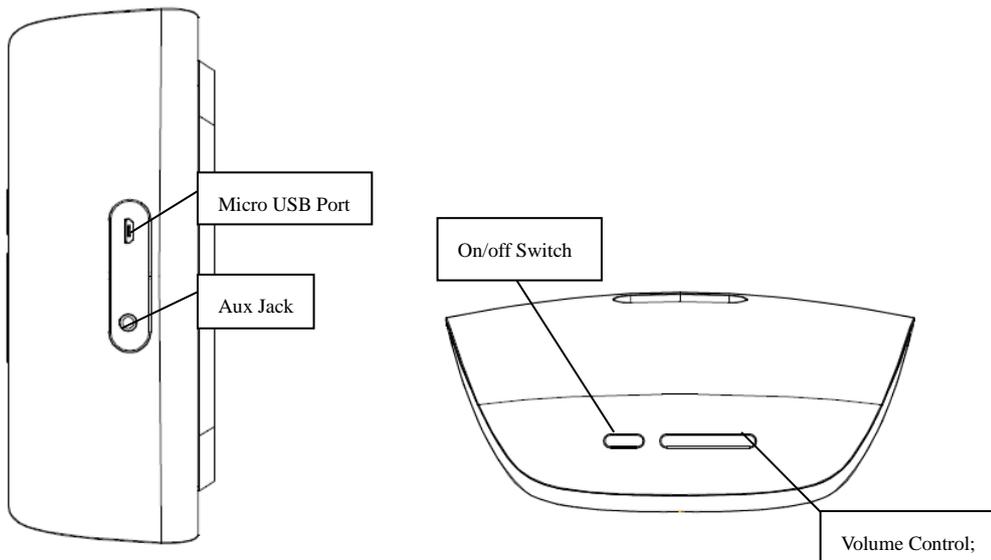

- Play/Pause as desired by pressing **▶||**. Click to receive calls at Bluetooth state. Hold down the button to refuse the calls.
- Press & hold “-” to select previous tracks, keep pushing to decrease the volume.
- Press & hold “+” to select songs downwards, keep pushing to increase the volume.
- Keep pushing **▶||** to turn ON/OFF the speaker

IV. Bluetooth function

1. Turn on the speaker. The white indicator light will flash to detect Bluetooth enabled devices near you. The white indicator light will go off if no Bluetooth device is detected within 5 minutes.
2. Pair the speaker with the desired Bluetooth device.
3. Play/pause as desired by pressing **▶||**
4. When you want to play music or a movie from another Bluetooth device, disconnect and restart the Bluetooth speaker. Then re-pair both devices.

V. AUX playback operation

1. Turn the speaker on.
2. Insert a 3.5mm audio cable into the aux jack on the back of the speaker, connecting to any audio device such as mobile phones or computers with the other port.
3. Press “**▶||**” to enter mute mode and re-press to release sound.

VI. Charging the speaker

- The speaker has a built-in Lithium battery. The battery is rechargeable and provides approximately 2.5 hours of continuous operation when fully charged.
- Use the micro USB cable to charge the speaker. The red indicator light will illuminate and will only go out when the speaker is fully charged.

VII. Hands-free calls

When Bluetooth speaker is connected successfully to mobile phone, it will beep when calls are Incoming:

- Press ►|| to answer/hang up calls
- Press twice ►|| to replay the last call appealed.

VIII. Bluetooth specifications

- Product Model: SRO6151
- Version: Bluetooth V2.1+EDR
- Transmission Distance: ≤10M (depending upon operation environment and devices to which it connects)
- USB Recharge Voltage: DC 5V
- Type of built-in battery: Lithium battery1050mAh
- Output Power: 5W*2
- Frequency Response: 90Hz-20 KHz
- Sensitivity: 80db
- Signal to Noise Ratio (SNR): ≥76dB
- Product dimension (L X W X D): 160.5 *62.1*75.6 mm
- Charging time: 2.5 hours

Compatibility

Wireless: Devices configured with Bluetooth V4.0 or higher version such as iPad, iPhone , iPod Touch and Mac as well as the most models of Smartphone or computers that support Bluetooth.

V4.0 Bluetooth version consists of protocols like A2DP, AVRCP and HFP and so on.

IX. Packaging includes

- 1 Speaker
- 1 USB cable for the charge of the device
- 1 User's Manual
- 1 AUX Cable

Troubleshooting

Problem	Solution
Unable to pair up with other devices	<ol style="list-style-type: none">1. Check if the speaker is still in the process of search or switch it off and then on.2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.
The sound is rather low or distorted	<ol style="list-style-type: none">1. Check the Bluetooth device's volume and then adjust it to a proper level.2. Recharge the battery
The music stops from time to time	<ol style="list-style-type: none">1. Check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and other Bluetooth devices.

The Bluetooth indicator remains off	<ol style="list-style-type: none"><li data-bbox="539 129 1506 212">1. It suggests the battery power drops quite low and retry once being recharged.<li data-bbox="539 224 1506 262">2. Turn it on again.
-------------------------------------	---

Hints: Another trouble, please consult the dealer or an experienced radio/TV technician for help.