



Portable Bluetooth Speaker with Carry Strap

MODEL: TI3194

Thanks you for purchasing this Tech Inc product.  
The TI3194 Bluetooth speaker was designed and created  
by Tech Inc to provide the user with a high quality  
product experience. This speaker can be used for various  
occasions that require crisp and powerful music  
environment.

Please read the following user guide in full before  
operating this product.

Please retain this guide for any future reference

## User Manual Contents

1. Important Safety Instructions
2. Product Accessories and Contents
3. Product Mind Map
4. Preparation to use
5. General product Operation
6. Maintenance and Cleaning
7. Trouble shooting guide
8. Product Specifications
9. Warranty Information

## Important Safety Instructions

**When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following.**

1. Read, Keep and Follow these instructions, heeding all Warnings.
2. Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus.
3. This appliance is not intended for use by persons (including young children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. **WARNING.** Do not insert any objects into any openings of an electrical apparatus.
5. **WARNING.** Do not touch any moving parts of any electrical apparatus.
6. **WARNING!** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable
7. **WARNING.** Do not use this apparatus near water. To avoid the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashes.
8. **WARNING.** No objects filled with liquid, such as vases, shall be placed on any electrical apparatus.

9. Do not immerse in any liquid whilst in use or in cleaning. Clean only with a damp cloth, dry with a dry towel. Do not use harsh abrasives as these may damage plastic parts.
10. DO NOT block any ventilation openings. Keep away from curtains, newspapers and restricted areas. Install in accordance with any specific manufacturer's instructions. Always allow a sufficient gap around the apparatus to avoid overheating.
11. DO NOT install near any heat sources such as radiators, gas heaters, stoves or other apparatus (including amplifiers) that produce heat. Do not leave in direct sunlight.
12. WARNING. Do not place any naked flame source, such as lighted candles on any electrical apparatus.
13. WARNING! Connect to a suitable 230-240V ~ 50 Hz power supply only. If a class 1 product it must be connected to a suitably earthed mains socket.
14. Always unplug from the power source when any electrical apparatus is not in use.
15. Do not abuse or damage a power cord. If any power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. A replaceable cord must be replaced with an authorised replacement from an authorised service agent only.
16. Only use attachments/accessories specified by the manufacturer.
17. Unplug this apparatus during lightening storms or when unused for long periods of time.
18. Attention is drawn to the environmental aspects of disposing of any battery.

19. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
20. Do not attempt to service any double insulated apparatus. Double insulated apparatus requires specialist servicing and knowledge to retain the safety of the apparatus.
21. **WARNING.** Do not use any electrical apparatus outdoors. If any electrical apparatus is to be used outdoors, use a suitable Isolating transformer or Electrical Safety Switch (RCD).
22. For household use only, this apparatus is not intended for commercial use.
23. This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments
24. If the apparatus is provided with a replaceable or non replaceable Lithium battery, the following applies
- **CAUTION:** Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
25. **Warning!** Dispose of batteries according to the manufacturers instructions.

26. If this apparatus is to be used by a third party, please supply these instructions with it.

27. No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.

## **Product Accessories and Contents**

The TI3194 Bluetooth speaker is equipped and accessorized with the following products

1 x TI3194



1 x Power Adapter

1 x Carry Strap

1 x AUX Cable

## Product Mind Map

All physical features of T13194 are illustrated below

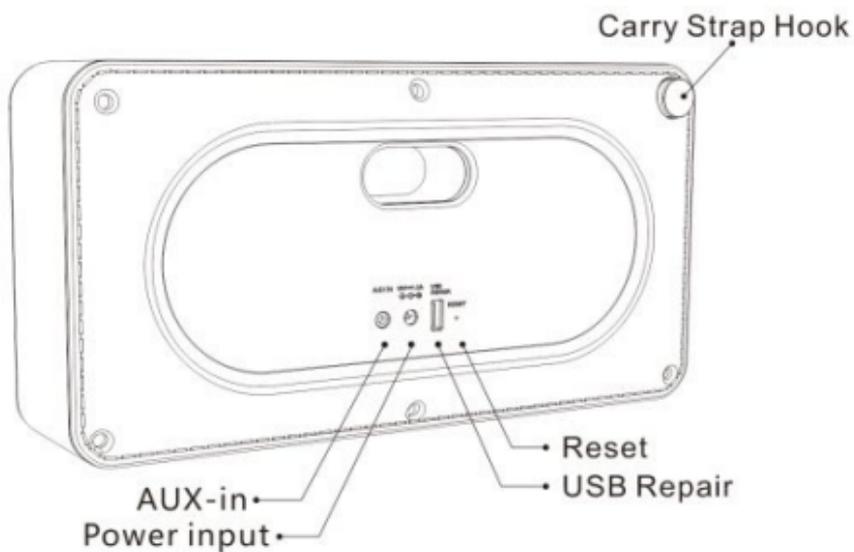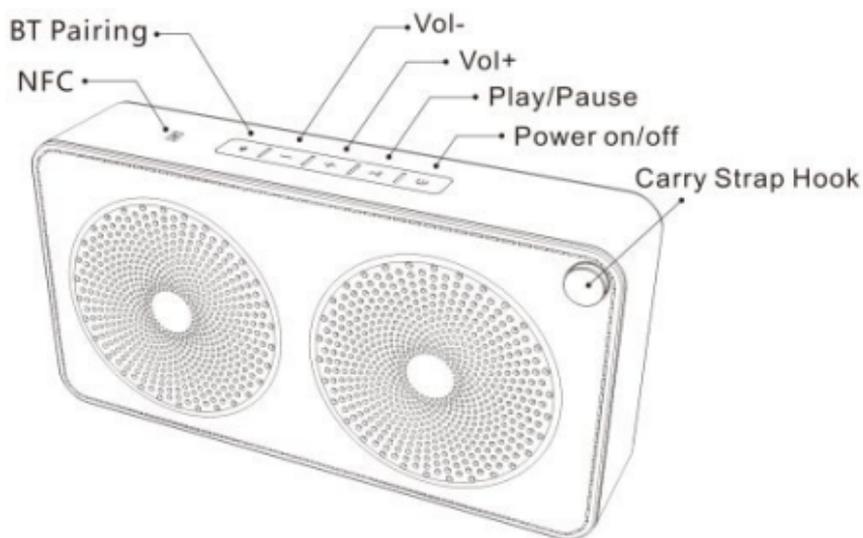

## Preparation to Use

Before beginning to use your TI3194 Bluetooth speaker there is some steps you should take to ensure the best life and use of this product.

- Ensure that all accessories illustrated previously have been provided
- The product will come with battery life, use the product until low battery signal is indicated.
- Recharge once battery indicates low
- Do not leave product with no charge or little charge.
- Always place in stable, secure and unexposed environments whilst in use.

### *Carry Strap;*

*This TI3194 speaker model is equipped with a carry strap that can be used with or without this strap. If you wish to attach the carry strap this can be simply attached by hooking each end of the strap onto the strap hooks on the front and rear of the speaker. Please ensure that each end of the strap is securely hooked before moving.*

## General Product Operation

### Product Controls;

The TI3194 main product controls are located on the top of the speaker. There is five key buttons which you will need to become familiar with to use this product.



Bluetooth Pair

Volume Control

Play/Pause

Power ON/OFF

|   |                |  |
|---|----------------|--|
| <br>Bluetooth Pair   | AUX Mode       | Whilst in AUX press to transfer to Bluetooth mode  |
|   | Bluetooth Mode | When a bluetooth connection is established. Press and Hold to cancel current connection. |
| <br>Volume Control | AUX Mode       | Volume minimize and maximize. Volume on connected device also synchronized.              |
|   | Bluetooth Mode | Volume minimize and maximize. Volume on connected device also synchronized               |

|  |                |   |
|--|----------------|---|
| <br><b>Play/Pause</b>   | AUX Mode       | Mute/Un-mute  |
|  | Bluetooth Mode | When a Bluetooth connection is established. The play and pause button will be effective and synchronized with connected device. |
| <br><b>Power ON/OFF</b> | AUX Mode       | Press and Hold to Power on/off the speaker  |
|  | Bluetooth Mode | Press and Hold to Power on/off the speaker  |

### *Speaker Connections;*

The TI3194 bluetooth speaker has two main ways in which it may disperse your music from your selected external device. Depending on the specification of your external device you may either make a bluetooth connection, AUX connection or both.

### *Making a Bluetooth Connection*

Once the TI3194 speaker is powered on the BT Pair button will repeatedly and automatically flash. The flashing indicates the speaker is looking for external Bluetooth compatible devices. On you external device

enter your Bluetooth settings and search for Bluetooth device "TI3194". Once the speaker is identified, select and proceed to establishing a connection. Once the connection is established the BT Pair button will remain solid light.


(1) If you wish to switch to another external Bluetooth device, long press the BT pairing key to cancel current connection. To connect another device follow the steps as above.

(2) If the Bluetooth speaker is turned off, the speaker will automatically connect the last successful paired device when turned on again.

(3) Both volume controls are functional. Ensure volume is adjust on both external device and speaker to get ideal speaker volume.

#### *Making an NFC Bluetooth Connection*

Once the TI3194 is powered on the BT Pair button will repeatedly and automatically flash. To make an NFC connection, turn on the NFC function of external device such as phone or tablet and move the device against or right next to the NFC induction zone of the TI3194 speaker. When connecting for the first time the device will indicate a connected prompt, please select "yes" to pair.

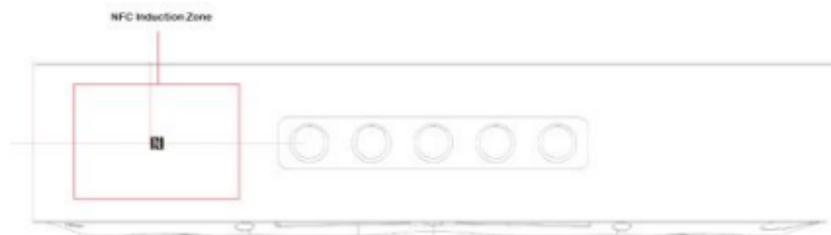

### *Making a AUX Connection*

Once the TI3194 speaker is powered on you can proceed to establishing an AUX connection between your speaker and external device. To make an AUX connection insert the supplied AUX cable into the rear AUX input on the speaker and the selected external device.

(1) Volume control is functional in AUX mode. Play/Pause is not functional or synchronized with connected devices.

### *Charging*

To charge the TI3194 Speaker please use the power supply supplied. Any other power supplies used with this device may damage the speaker.

To charge the device connect the adapter to the speaker and adapter to the suitable AC outlet.

When charging has been established the power ON/OFF key will fade in and out (breathe) a red light. When the speaker is fully charged the red light will remain solid red.

When the battery of the speaker is low the power ON/OFF key will flash red. Please proceed to charge in this state.

**AVOID:** Leaving speaker in a low battery/zero battery state as it will affect the life of your battery.

### *Maintenance and Cleaning;*

For any maintenance or repairs of the TI3194 speaker please contact technical support. Please **DO NOT** attempt to repair this speaker yourself as this may void any product warranty given.

IF cleaning the TI3194 speaker the speaker must be turned off before you begin. Do not use volatile solvents (such as ethanol, rosin, toluene solvent) to clean the machine. This type of chemicals may damage the machine. Only use light soaped and slightly damp cotton or microfiber cleaning cloth. If the cotton or cloth is too wet it may drop water droplets into the product panels and speakers causing malfunction.

## Troubleshooting

In the event that you encounter any problems using this product, please refer to the below table before contacting customer support.

| Problem                          | Solution  |
|----------------------------------|---|
| The speaker has no sound         | <ul style="list-style-type: none"><li>• Ensure the speaker has some charger</li><li>• Adjust the volume on the speaker and any connect devices.</li><li>• Please ensure the AUX cable is connected correctly.</li></ul>   |
| No power or Not charging         | <ul style="list-style-type: none"><li>• Please make sure that the adapter and the host is connected correctly;</li><li>• Please check the power adapter voltage and current demand;</li></ul>   |
| Bluetooth pairing fail           | <ul style="list-style-type: none"><li>• Please check whether machine is in the pairing state(BT pairing key flashes) or not; If not, please long press BT pairing key and pair again;</li><li>• Pair again after reboot;</li></ul>  |
| Bluetooth mode voice interrupted | <ul style="list-style-type: none"><li>• Ensure that the machine and Bluetooth devices to connect at a distance of 10 meters;</li><li>• Please ensure that no obstruction between the machine and the Bluetooth device, or try another Bluetooth device to play;</li></ul> |

|                                  |   |
|----------------------------------|---|
| <p>NFC Pairing fail</p>          | <ul style="list-style-type: none"> <li>• Ensure that the Bluetooth device supports NFC function and has been in the state of opening;</li> <li>• Please check whether machine is in the pairing state (BT pairing key flashes) or not;</li> <li>• In the first pairing, please ensure the Bluetooth device touches NFC induction zone of machine and perform the pairing operation;</li> <li>• Remove mobile phone protection shell and try NFC pairing again;</li> </ul> |
| <p>The keys have no function</p> | <ul style="list-style-type: none"> <li>• Plug the adapter, then power on;</li> <li>• Use a toothpick or needle to press the reset hole, then power on;</li> </ul>   |

## Product Specification

For all technical information and specification please refer to the below specification table;

|                               |   |
|-------------------------------|---|
| <b>Model</b>                  | TI3194  |
| <b>Speakers Configuration</b> | 2 x 1 inch dome tweeter, 8ohm + 2 x 3 inch woofer, 4ohm |
| <b>Frequency response</b>     | 60Hz-20KHz (-10dB)                                      |
| <b>Power amplifier</b>        | Class D @ 15W x 2CH                                     |
| <b>THD</b>                    | < 1%  |
| <b>SNR</b>                    | >75dB(A)  |
| <b>Sound pressure level</b>   | 92dB± 3dB (500mV@1M)                                    |
| <b>Playback Connections</b>   | Bluetooth and AUX IN                                    |
| <b>Power Adapter</b>          | DC 15V,1.2A   |
| <b>Battery Specification</b>  | Lithium battery. Capacity: 2200mAh, 11.1V               |
| <b>Product size</b>           | 310mm x 160mm x 80mm                                    |
| <b>Bluetooth version</b>      | BT4.0<br>HSP+HFP+A2DP+AVRCP&NFC                         |

## Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of one years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

## WARRANTY FOR PRODUCTS USED COMMERCIALY LIMITED TO 90 DAYS

Type of Product: \_\_\_\_\_

Model No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Product Purchased From:

\_\_\_\_\_

Your Name: \_\_\_\_\_

Address:

\_\_\_\_\_

Phone Number: \_\_\_\_\_

### IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise a fee may be charged.

New Zealand call Toll Free 0800-898580



