

GASCRAFT®

MONZA KETTLE BBQ 57CM

Model No. KY22022B1



FOR OUTDOOR USE ONLY

Retain these instructions for future use

Important: The installer or seller must leave these instructions with the consumer.

IMPORTANT SAFETY WARNINGS

We want you to assemble and use your Gascraft Charcoal Grill as safely as possible.



When you see this safety alert symbol please pay particular attention to the information which follows it.

Read all safety warnings and instructions carefully before assembling and operating the Charcoal Grill.



WARNING

- WARNING! Keep children and pets away.
- Do not use indoors.
- NEVER take a smoldering or lit BBQ into your house, a tent, a caravan or a cabin. When in use BBQ is to remain outside at all times.
- ATTENTION! This barbecue will become very hot, do not move during operation.
- This barbecue must not be left unattended while in use.
- This barbecue is not designed for commercial use and doing so will void its warranty.
- This barbecue is for outdoor use only. If used in enclosed spaces such as a building or garage toxic fumes will build up and may cause death or serious injury.
- Always use the barbecue in a well ventilated area, but out of high winds.
- Position the barbecue so that winds do not carry hot ash onto combustible surfaces.
- Do not use this barbecue without first reading the operating instruction carefully.
- Improper assembly of the barbecue may be dangerous. Please follow all the assembly instruction carefully before lighting the barbecue. Altering the barbecue in any way from the manufacturer's instructions may be dangerous and will void all warranties.
- Remember the signs and symptoms of carbon monoxide poisoning - headaches dizziness, breathlessness, nausea, collapse and loss of consciousness.
- Minimum clearance from combustible surface. Side of BBQ - 700mm, Back of BBQ - 700mm, Vertical above BBQ - 1500mm.
- Do not store or use petrol or any other flammable vapours or materials within 8 meters of this barbecue.
- Keep all combustible items and surfaces at least 60cm away from the barbecue at all times. This includes wooden decks both treated and untreated.
- Keep the grilling area free from combustible materials, petrol and other flammable vapours or liquids.
- Keep all electrical cables away from the hot surface of the barbecue.
- Do not touch metal parts of the barbecue until it has completely cooled. Wear barbecue mitts when adjusting air vents or lifting the lid.
- Do not touch the grills, charcoal or any part of the barbecue to see if they are hot.
- Never move the barbecue while in use and wait until the coals are completely extinguished and cold before attempting to move the barbecue.
- Always open the lid carefully as steam and heat builds up inside the barbecue and can cause serious injury.

CAUTION

- Regularly check and clean the barbecue to avoid any built up of fats which may cause a fat fire and would void your warranty,
DAMAGE CAUSED BY FAT FIRES ARE NOT COVERED BY THE WARRANTY
- Do not remove the ash until it is completely extinguished and cold.
- Using abrasive cleaners on the barbecue or grills will damage the finish and void the warranty.
- Using sharp objects to clean the bowl and hood will damage the finish and void the warranty.
- Allow the complete barbecue to cool before cleaning and washing in a warm soapy solution. Ensure that any dried fat and food deposits are cleaned off the grills after EVERY cooking session. Wash the grills with hot soapy water then rinse and dry before returning the grills to the barbecue.
- Be fire safe. Always do a safety check before you light any type of outdoor fire. If you start or see a fire that is out of control, call 111 from a safe place.

SAFETY INFORMATION

- Make sure the ash collection cup/tray is securely attached and the air vents are clean and clear before you light the barbecue.
- When lighting the barbecue ensure you do not have any loose clothing touching or near the coals.
- Always wear barbecue mitts and protective clothing when lighting the barbecue with a chimney starter or when adding more fuel to the barbecue.
- Ensure the barbecue is on a solid, flat and level non combustible surface before lighting.
- Do not use paraffin, alcohol or other combustible materials to light the barbecue.
- CAUTION! Do not use spirit or petrol for lighting or re-lighting the barbecue! Use only proper commercially made firelighters



WARNING

Failure to read and follow this manual and the safety warnings herein may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

Important

Check with your local council regarding fire bans before using your Charcoal BBQ.

 
Check with your local council regarding air quality regulations.

- ⚠ **IMPORTANT** Only use this Charcoal BBQ on a flat, level non-flammable surface or ground.
- ⚠ This product is for **OUTDOOR USE ONLY**. **NEVER** use in an enclosed space such as a carport, garage, veranda, covered patio, or under an overhead structure of any kind.
- ⚠ **ATTENTION!** This Charcoal BBQ will become very hot. Do not attempt to move it during operation.
- ⚠ **WARNING!** Keep children and pets away from the Charcoal BBQ when in use. Any modification of this BBQ may be dangerous.
- ⚠ When positioning, ensure the Charcoal BBQ is a minimum of 1 metre from flammable items or structures.
- ⚠ Do not over fill metal tray with fuel.
- ⚠ Never handle hot parts with unprotected hands.
- ⚠ **DO NOT USE INDOORS.** If used indoors, toxic fumes can build up and cause bodily injury or death. Only use outdoors in a well-ventilated area.
- ⚠ **ATTENTION!** This Charcoal BBQ should not be used under overhead combustible construction.
- ⚠ **NEVER** leave this Charcoal BBQ unattended when in use.
- ⚠ Do not add starter fluid or charcoal impregnated with starter fluid to warm or hot fires.
- ⚠ Do not use clothing with long or loose sleeves when operating the BBQ.
- ⚠ Do not use the BBQ in high winds. Do not touch the BBQ with your hands to check if it is hot.
- ⚠ Do not use water to control flare-ups or extinguish Charcoal. Always extinguish your BBQ when not being monitored
- ⚠ Do not dump hot Charcoal where it may cause a fire hazard. Do not store away or cover the BBQ until all embers are extinguished and removed, and the BBQ is fully cooled.
- ⚠ This BBQ is not intended to be used in recreational vehicles or boats.
- ⚠ **CAUTION!** Do not use petrol, spirit or lighter fluid for lighting or re-lighting the BBQ!
- ⚠ Do not allow grease, fat or food residue to build up in or on the barbecue – RISK OF FIRE.
- ⚠ Do not hang any combustible materials from the handrails of this Charcoal BBQ.
- ⚠ Never overload the cooking grill with food – evenly space food over the cooking grill surface.
- ⚠ Barbecue mitts should always be used while cooking, lighting or adjusting barbecue vents and handling the barbecue.

MAINTENANCE

- Clean the drop pan with soap and water.
- NEVER use steel brushes, aggressive detergents or sharp objects on porcelain surfaces! This will damage the surfaces.
- To extend the life of your barbecue, use a suitable cover.
- Store the BBQ in a dry area.
- Frequency of cleanup is determined by how often the grill is used. Make sure coals are completely extinguished before cleaning inside of the unit. Thoroughly rinse with water and allow to air dry before using again. Wipe out the interior of the unit with a cloth or paper towels. When finished cooking, and the unit has adequately cooled, clean out all remaining ashes. Ashes collect moisture, which can lead to premature rusting and decay. Rust can appear on the inside of your grill. Maintaining a light coat of vegetable oil on the interior surfaces will aid in the protection of your grill. Exterior surfaces of the grill may need occasional touch up. We recommend the use of commercially available black high temperature paint.

EXPLODED DIAGRAM

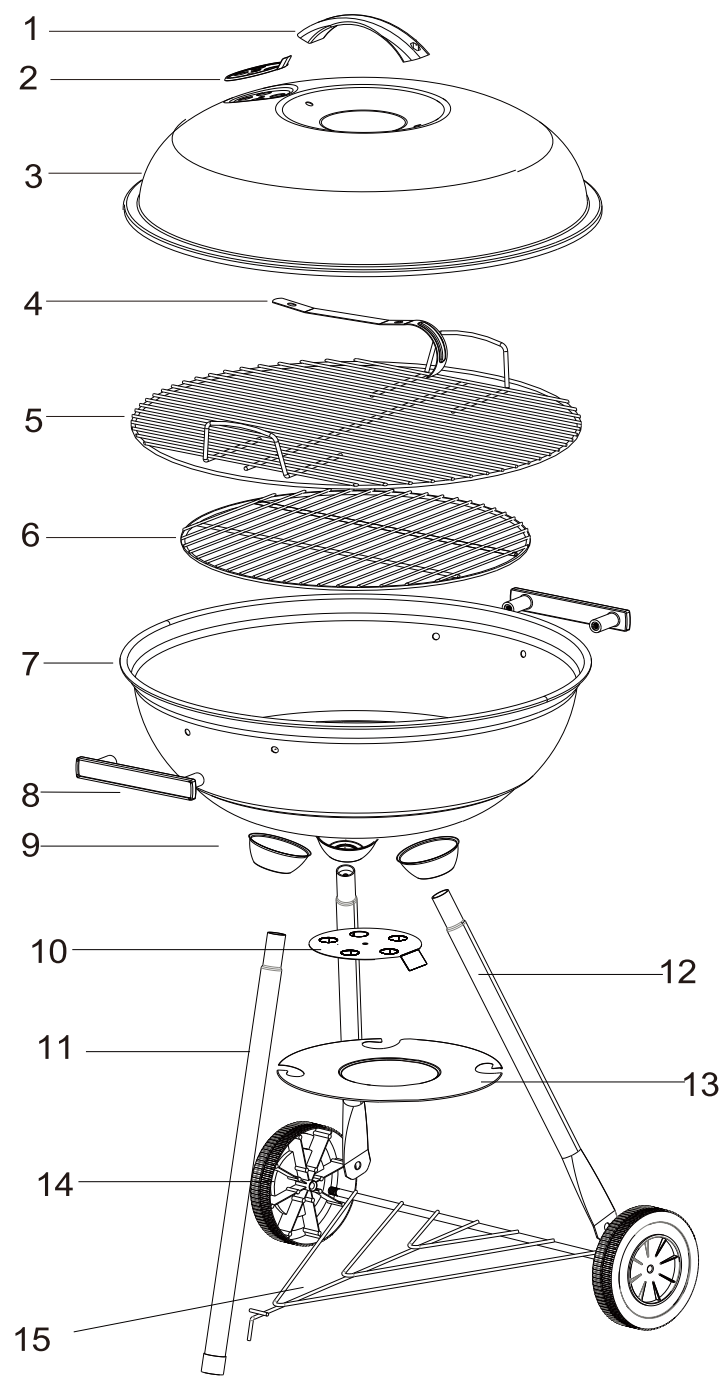

A	M4 x 25mm		x 2
B	M4 x 10mm		x 2
C	M6 x 16mm		x 4
D	M6 x 30mm		x 3
E	Ø4 x 8mm		x 2

F	M4		x 4
G	Ø6 x 16mm		x 7
H	Ø8 x 18mm		x 2
I	M8		x 2

ASSEMBLY INSTRUCTIONS

For Easier Assembly:

- To avoid losing any small components or hardware, assemble the product on a hard level surface that does not have cracks or openings. You may wish to lay down a blanket or similar, to avoid possible damage to the finish during assembly.
- Clear an area large enough to lay out all components and hardware.
- Great care has been taken during manufacturing to remove sharp edges but you should handle all components with care to avoid injury.
- Check you have all components before beginning assembly.
- When applicable, tighten all hardware connections by hand first. Once the step is completed go back and fully tighten all hardware.
- Follow all steps in order to properly assemble the product.

Tools required:

- Adjustable Spanner or Socket Wrench
 - Phillips Screwdriver
-
- Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact retailer from whom you bought this product.

 
This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE**.

The fittings contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.


Read this leaflet in full before commencing assembly.

ASSEMBLY INSTRUCTIONS

Step 1

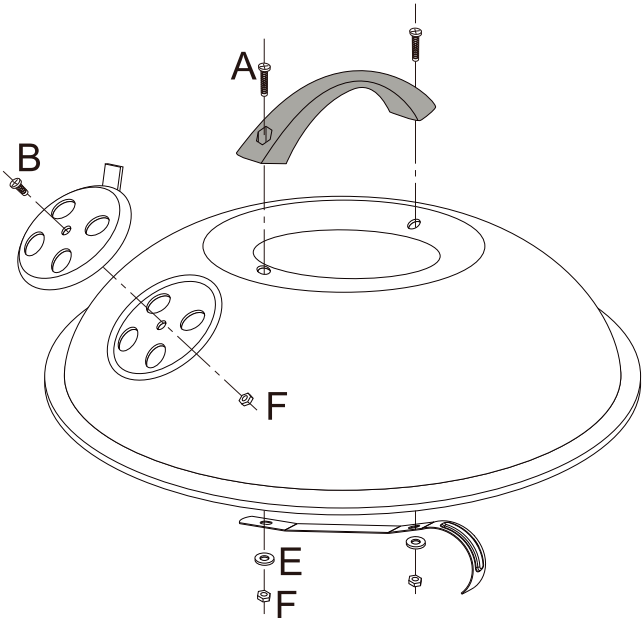


 Step 2

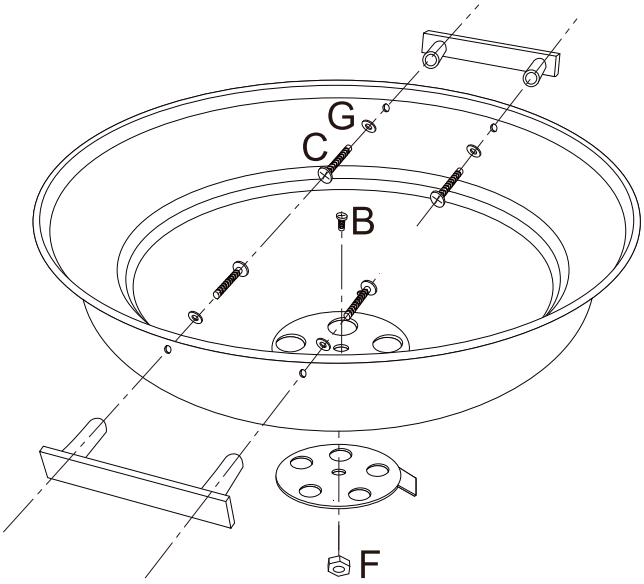


ASSEMBLY INSTRUCTIONS

 Step 3

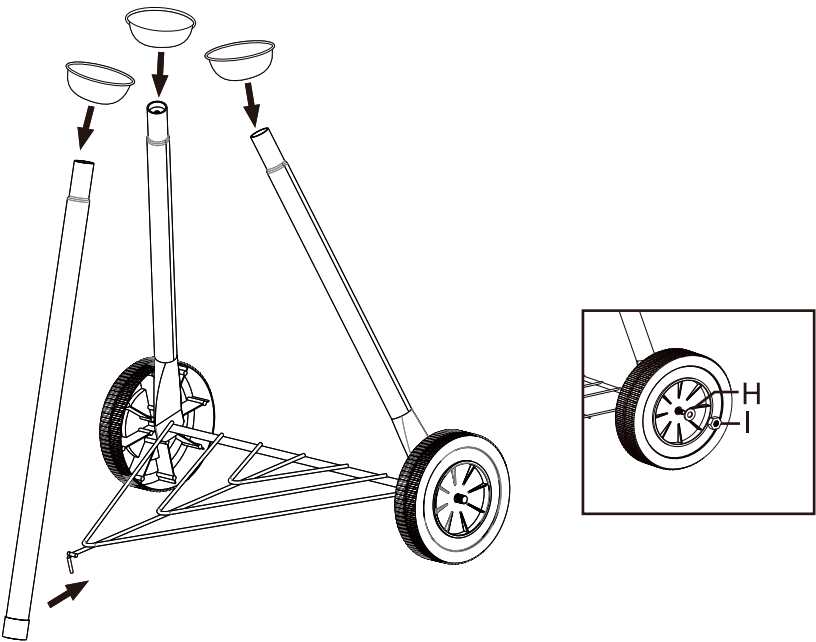


 Step 4

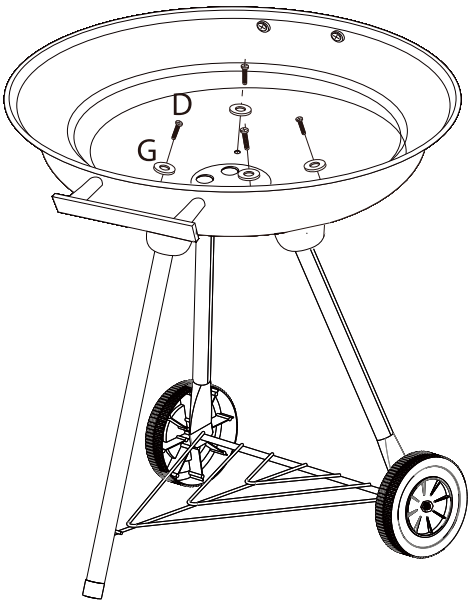

ASSEMBLY INSTRUCTIONS

 Step 5

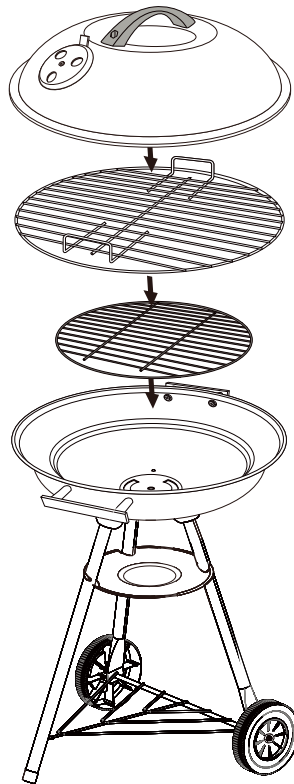

Step 6

