 


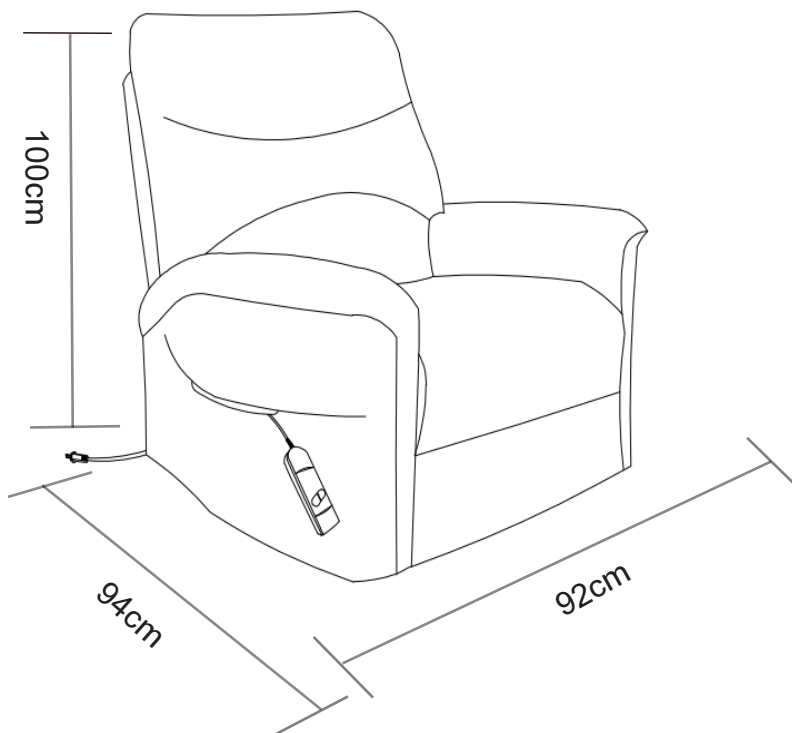

Lift Up Electric Recliner INSTRUCTION MANUAL

 
Maximum weight for this product is 120 kg



This icon in assembly instructions indicates important notes that users should follow during assembly.



To reduce paper waste and protect the environment, the instruction manual uses less pages and is printed on recycled paper.

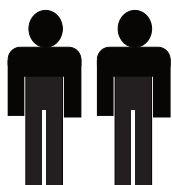

2-PERSON ASSEMBLY



Warranty

We pride ourselves on producing a range of quality products that are both packed with features and completely reliable. We are so confident in our products, we back them up with a two years warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 222 246
This product is covered by two years warranty when accompanied by proof of purchase.

Marketed by The Warehouse Ltd
26 The Warehouse Way Northcote, Auckland 0627. 0800 422 274

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Important Safety Instructions

CAUTION:

- Beware of entrapment.
- Keep hands and fingers clear of the mechanism when operating the controls.
- Do not exceed the advised weight for the product.
- Ensure that children or pets are not playing or lying in the way when the mechanism is operated.
- Prevent children from playing on the furniture or with the controls

When using an electrical appliance, basic precautions should always be followed, including:

- Always unplug the chair from the power source after use, and before cleaning.
- Do not touch the chair if large amounts of liquid have spilled on it. Unplug immediately.
- The chair should never be left unattended when plugged in. Unplug from the outlet when not in use or before putting on or taking off parts or attachments.
- Do not use outdoors.
- Do not carry this appliance by the attached power cord; do not use it as a handle.
- Keep the cord away from heated surfaces.
- Close supervision is necessary when this appliance is used by or near Children or pets.
- This unit is not a toy. Children should not use or play with it.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, press the OFF button, make sure all functions are stopped, then remove the plug from the outlet.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments that haven't been provided with the unit. This appliance is not intended for use for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

AC/DC Switching Power Supply
Input: 100-240Vac 50/60Hz 2.0A
Output: 29.0Vdc 1.8A 52.2W Class II

Tips Before You Start


1. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
2. Please check that all parts are present before you start the assembly of your furniture.
3. For ease and speed of assembly, we recommend that you identify all the parts required for each step before commencing assembly.
4. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
5. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily.
6. During assembly please take care not to over-tighten hardware, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

Care and Maintenance



1. Ensure the unit is unplugged from the power source and allow the unit to cool down before cleaning.
2. Regular maintenance of your fabric chair includes vacuuming and using a soft brush to gently whisk dirt away. Always make sure your brush is soft to avoid snagging and pulling on the fabric.
3. For stubborn stains use a water-based upholstery cleaner or dampen the stain with warm water and rub gently with a light mild detergent. Once the area is completely dry, brush the fabric with a soft-bristled brush.
4. Do not use any abrasive cleaners.
5. Please periodically check all parts and re-tighten them as necessary.
6. Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or defects to finishes.
7. Please do not place hot items (e.g. hot drinks) directly onto the surface.
8. Please do not drag and pull your furniture.

Operation Instructions


- Plug Part C the control unit into Part E the AC Adapter control outlet cord and lock in place, then insert the mains cord assembly Part D into the inlet of the AC Adapter and connect to a wall outlet for power. Please refer to step 2 for further detail. This item must be fully assembled prior to use.
- Press and hold the DOWN button to recline the chair back and foot-rest.
- Press and hold the UP button to return the chair back and foot-rest to their original position.
- Once the chair is in the original position Press and hold the UP button a second time to lift the entire chair.
- Press the DOWN button to lower the chair and return it to the original position.

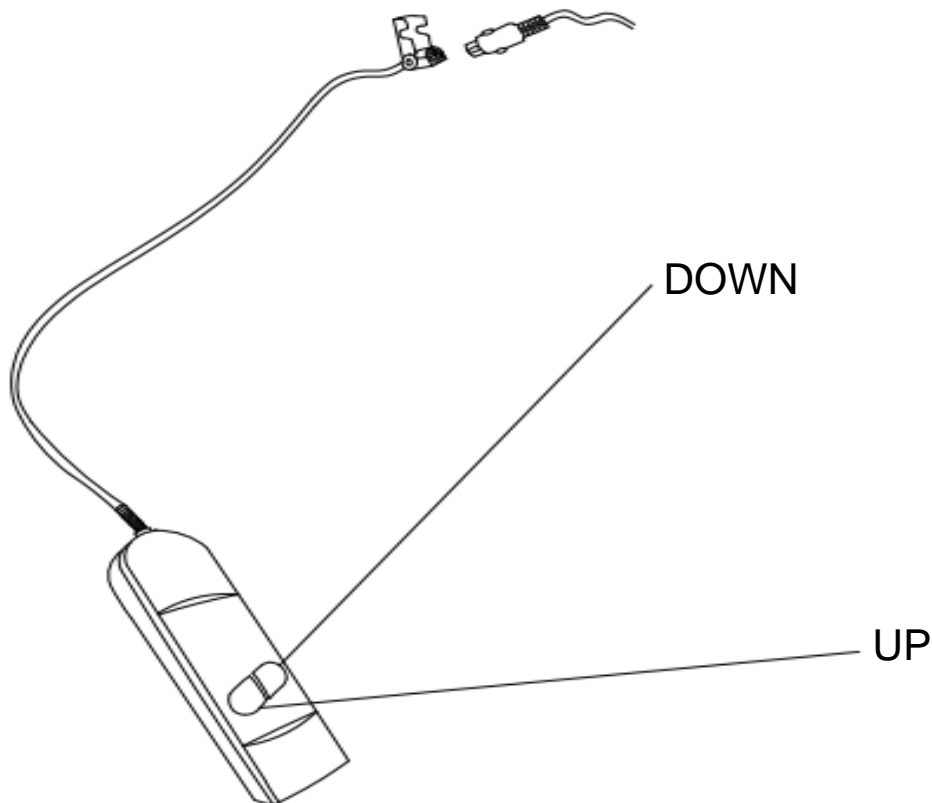

Part Name

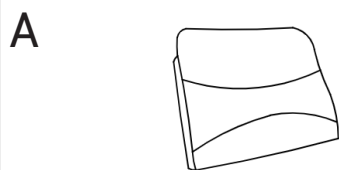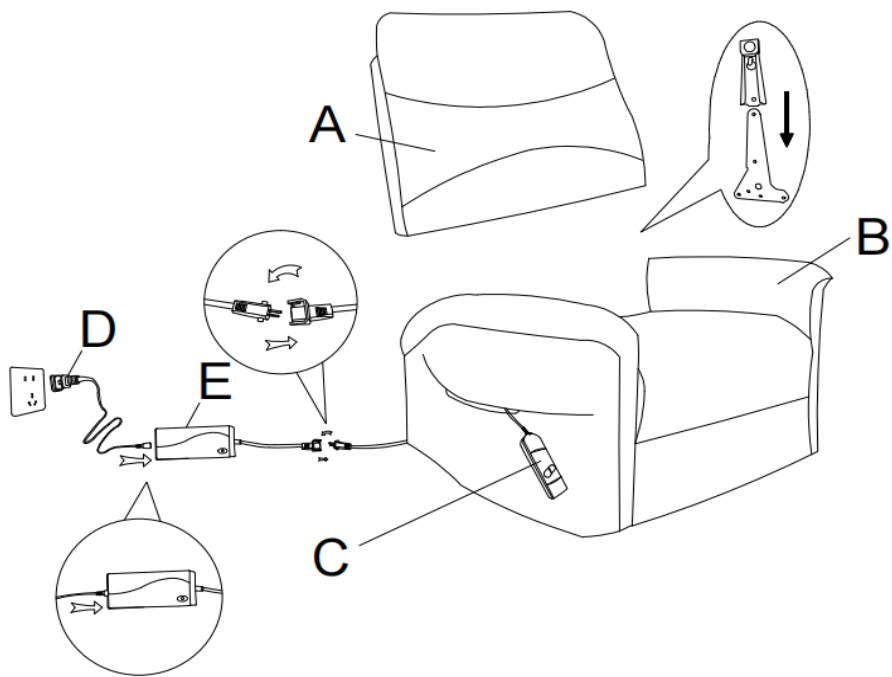


1 PC

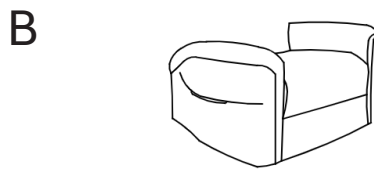

1 PC



 1 PC

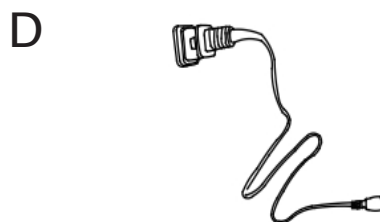


1 PC



1 PC

Assembly

 Step 1

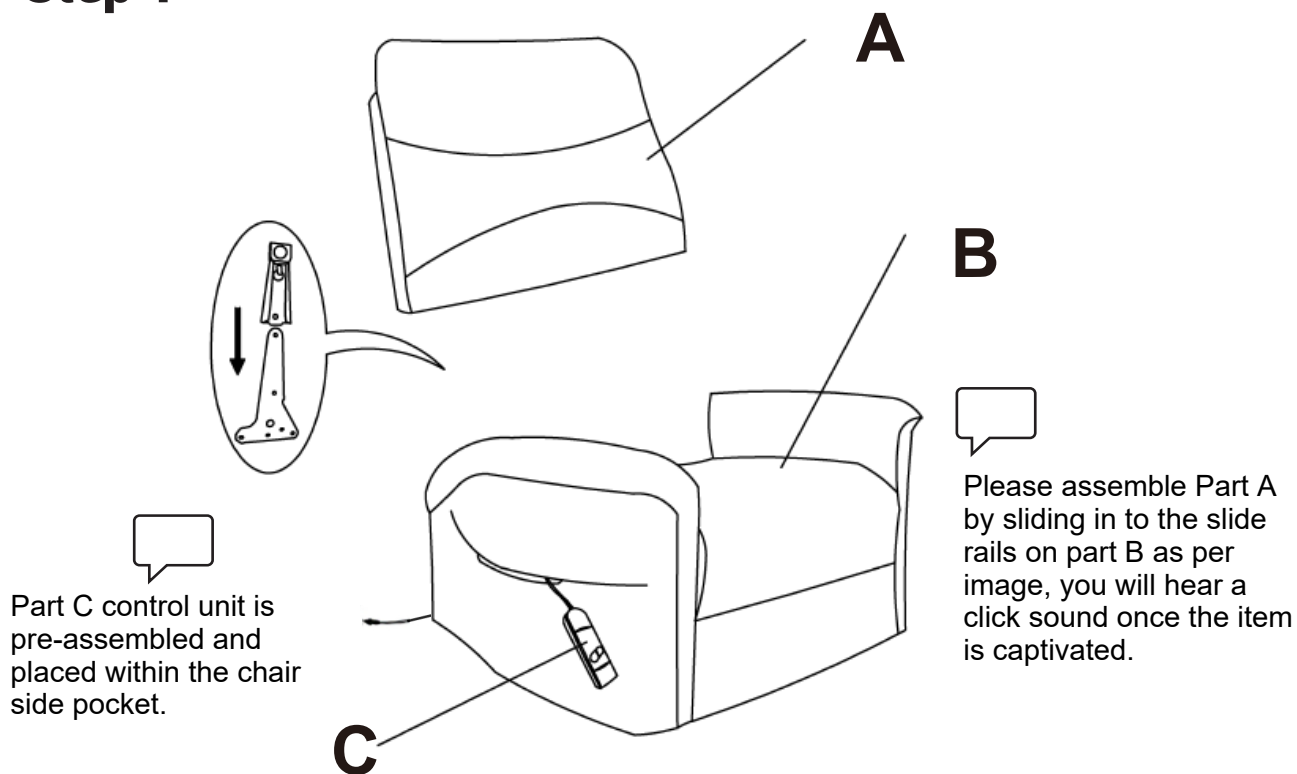

Step 2

