



Models: OM127B / OM127H

# Smoke Alarm Troubleshooting Guide

PROBLEM	CAUSE	SOLUTION
Smoke alarm does not respond when Test button depressed.	Battery not connected.	Check that the battery is inserted correctly.
	Battery is flat.	Replace the battery.
Red LED flashes and the alarm sounds one beep every 45 seconds.	Battery is low.	Replace the battery.
Smoke alarm sounds unwanted alarms intermittently or when residents are cooking, taking showers, etc.	1. Alarm has dust or insect inside casing.	1. Clean the alarm by gently vacuuming all openings around the outside of the alarm using your household vacuum's soft brush attachment.
	2. Alarm is incorrectly located.	2. Move alarm away from kitchen or bathroom/laundry areas where cooking fumes or steam can trigger the alarm.