

10-31排

- Turn the thermostat setting clockwise to increase temperature and anticlockwise to decrease temperature. The heater will turn ON and OFF to maintain the desired heating setting.

AFTER SALES SUPPORT
☎ (NZ) 0800 422 274