

285x210mm 10-31改

8

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



LIVING & CO

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274
This Product is covered by 3 year warranty when accompanied by proof of purchase.

IM Version 1.0 - September 2017

LIVING & CO

AFTER SALES SUPPORT
0800 422 274

LIVING & CO

OSCILLATING CERAMIC HEATER



Instruction Manual
MODEL: LFH1500SF

LIVING & CO

AFTER SALES SUPPORT
0800 422 274

2

Contents

03 General Safety Instructions

04 Product Operating

06 Care And Cleaning

LIVING & CO

AFTER SALES SUPPORT
0800 422 274

6

Care and Cleaning

CLEANING AND MAINTENANCE

Before cleaning

-When not in use or before cleaning, always disconnect the appliance from the mains supply.

Cleaning

-Cleaning can only be done when the unit is cooled. Do not immerse the whole unit in water or other liquid. Do not use harsh solvents on this unit.

-Wipe the exterior of the appliance with a damp cloth. Dry the unit completely with a dry towel.

Damage check

-Always check that the appliance is not damaged, is in good working order and that all parts are secure. Check the power supply cord and plug regularly for cuts or damage. For safety purposes, DO NOT use the heater if damage is found.

Store in a safe place

-When not in use, store your appliance and the instructions manual together in a safe and dry place.

NOTE: Always clean and store away your appliance with this instruction manual when not in use.

TECHNICAL SPECIFICATION

Model No: LFH1500SF
Supply: 220-240VAC 50Hz
Wattage: 1500W

LIVING & CO

AFTER SALES SUPPORT
0800 422 274

3

General Care and Safety Guide

Thank you for choosing a Living & Co Oscillating Ceramic Heater. This Living & Co appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this booklet, will give you years of useful service. Please read these instructions carefully and keep for future reference.


1. WARNING you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse, permanently disabling the unit.
2. Use only the voltage specified on the rating label of the appliance.
3. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
4. This appliance is intended for household use only and not for commercial or industrial use.
5. Indoor use only.
6. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
7. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
8. Always unplug appliance when not in use.
9. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Living & Co Customer Services Team.
10. If your appliance does not work, or is not working properly, contact the place of purchase or the Living & Co Customer Services Team.
11. Do not connect the appliance to mains supply until completely assembled and adjusted.
12. Ensure hands are dry before handling the plug or main unit.
13. Do not locate the appliance directly below any power socket outlet.
14. Ensure appliance is on a flat, stable, heat-resistant surface.
15. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
16. Carry out regular checks of the supply cord to ensure no damage is evident.
17. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
18. Do not remove plug from power socket by pulling cord, always grip plug.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
20. It is recommended that this appliance is plugged directly into the wall socket. The use of power boards is not recommended as many power boards are not designed to supply power to high wattage appliances.
21. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
22. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
23. Do not remove plug from power socket until the appliance has been switched off.
24. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
25. Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
26. Switch off and use handle provided when moving.
27. Do not place appliance close to radiant heat source.
28. Never use the appliance to dry clothes.
29. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
30. Do not sit on the appliance.
31. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
32. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
33. Children should be supervised to ensure that they do not play with the appliance.
34. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
35. There are no user serviceable parts installed in the unit.
36. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
37. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

4

Operating your Appliance

PRODUCT SPECIFICATION

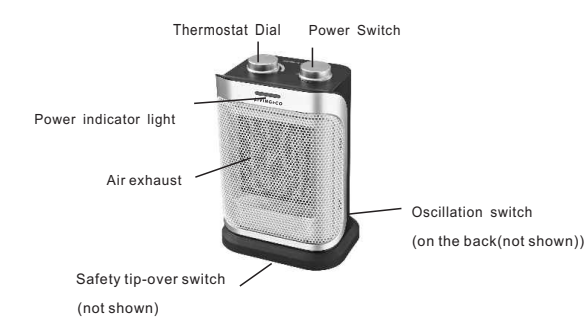

PACKAGE CONTENTS

1 Main Unit 1 Instruction Manual

NOTE: Confirm all parts before disposing of carton. Safely dispose of all plastic the bags and other packaging components. They may be potentially dangerous to children.

ASSEMBLY AND OPERATION

•Ensure the Power Switch is in OFF (position '0') position before connecting to the mains power.

•Make sure the plug and cord are not damaged in any way.

•Insert the plug into a wall socket with correct power output, 220-240V AC 50Hz.

•Turn Power Switch to either:

- "F" for Fan Only

- "L" for Low Heat

- "H" for High Heat

NOTE: When the heater is switched ON, the red power indicator light will turn ON (make sure to turn the Thermostat setting past the midpoint, selecting a lower setting will not turn the heater ON).

•The Thermostat can be used to finely regulate the temperature. Turn the Thermostat setting anti-clockwise to increase temperature and anti-clockwise to decrease temperature. The heater will turn ON and OFF to maintain the desired heat setting.

•Select the oscillating control switch "O/I" located at the back of heater to activate the oscillation function ON or OFF.

LIVING & CO

AFTER SALES SUPPORT
0800 422 274

5

Operating your Appliance

IMPORTANT SAFETY FEATURES

Your heater is equipped with an Overheat Protection System. When the threshold temperature has been reached, your heater will turn off automatically. To reset your heater when the Overheat Protection System has been activated, perform the following steps:

- Turn the "Power switch" to the OFF (0) position.
- Disconnect the power cord from the mains electrical power outlet.
- Ensure that both the intake and the exhaust vents are clear of obstructions.
- Allow your heater to cool down for approximately 25 minutes.
- Plug your heater back into mains power, the heater should resume normal operation.

NOTE: There is a tip over switch attached to the base of the heater. If the heater is not placed on a flat surface or it is knocked over, the power to the heater will shut down automatically.

LIVING & CO

AFTER SALES SUPPORT
0800 422 274