

Living & Co

BOBBI MUSHROOM LAMP

Instructions

Please read these instructions and warnings carefully before operating to ensure safe and satisfactory operation of this product.

Please also retain these instructions for future use.

Warnings:

- This is a Class II product and does not require an earth connection.
- Always use the correct type and wattage of bulb.
- When changing a bulb, always switch off the light at the wall socket and allow the bulb to cool down before handling.
- Dispose of old bulbs carefully.
- Only use the lamp fitting on a stable / dry and level support surface.
- Do not switch on the light until the assembly is complete.
- Do not cover the lamp or bulb during use as this could be a potential safety hazard
- Turn off the appliance when not in use.
- The luminaire is not intended for use by children unless suitable adult supervision is provided.
- Children should be supervised to ensure they do not play with the luminaire.
- The fitting is intended for indoor use only.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

CAUTION: Ensure that the light bulb is not within the recommended 0.5m of any surface when operating as this could be a potential safety hazard.

CAUTION: Never exceed the bulb wattage stated.

Assembly:

1. Remove protective packaging from the lamp shade and lamp fitting assembly.
2. Fit the support stem onto the circular base, by rotating the stem clock-wise until fully threaded and secured.
3. Remove the threaded plastic shade ring (retaining nut) from the lamp holder.
4. Install the lamp shade onto the lamp holder body.
5. Replace the threaded plastic shade ring (retaining nut) onto the lamp holder body to secure the lamp shade in position.
6. Install the recommended bulb.
7. Place the lamp fitting on a stable / dry and level support surface.
8. Insert the supply cord plug into a suitable mains outlet and use the in-line cord switch to operate.

Lampshade and bulb fitment:

