

# Full-Auto Electric Washing Machine

**Model : DWF-ELC55BGN / DWF-ELC55GPN**

## INSTRUCTION MANUAL

- Applying One-Touch Operation System.
- Realizing calm washing through the innovational low-noise design.
- Before operating this washer, please read this instruction completely. Thank you.



CONTENTS	Page
PARTS AND FEATURES.....	2
WASHER SAFETY .....	3
INSTALLATION INSTRUCTIONS .....	4
ELECTRICAL REQUIREMENTS .....	5
INLET HOSE CONNECTION .....	6
OPERATING YOUR WASHER.....	7
THE FUNCTIONS OF THE CONTROL PANEL .....	8
WASHING PROCEDURE AND COURSE SELECTION .....	9
GENERAL PROCEDURE FOR OPERATION .....	13
CARING FOR YOUR WASHER .....	14
HOW TO CLEAN THE FILTER.....	15
REMOVING STAINS .....	16
TROUBLE SHOOTING .....	17
SPECIFICATION .....	18

### A NOTE TO YOU

*Thank you for buying a DAEWOO appliance.*

*DAEWOO washers are easy to use, save time, and help you manage your home better.*

*This manual contains valuable information about how to operate and maintain your washer property and safely.*

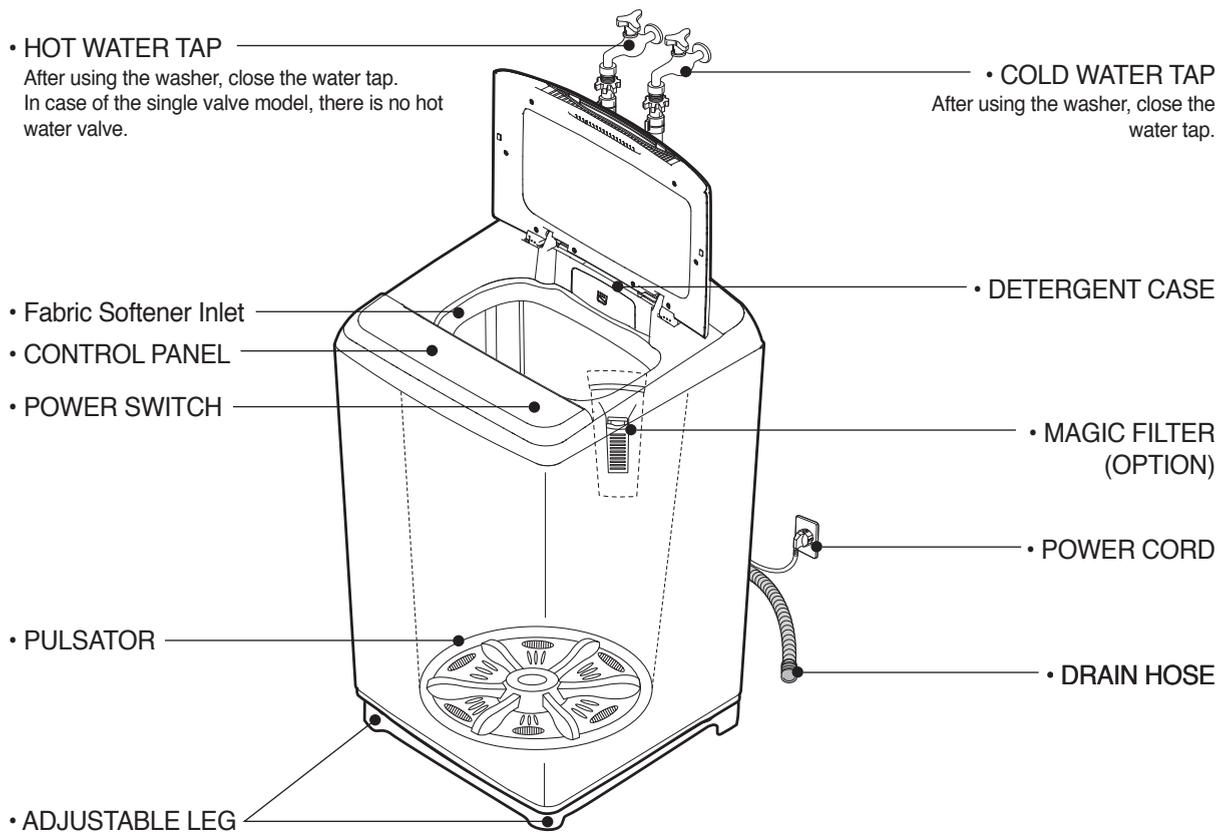
*Please read it carefully.*

# PARTS AND FEATURES

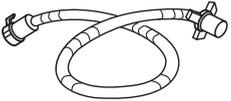
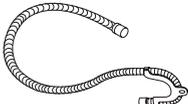
The parts and features of your washer are illustrated on the page.  
Become familiar with all parts and features before using your washer.

## NOTE

- The drawings in the book may vary from your washer model.  
They are designed to show the different features of all models covered by this book, Your model may not include all features.



## ACCESSORIES

COVER UNDER (OPTION)	WATER TAP ADAPTER		INLET HOSE
			
HOSE DRAIN (FOR PUMP)	HOSE DRAIN CLAMP	HOSE DRAIN (FOR NON-PUMP)	CONNECTOR INLET
			

# WASHER SAFETY

## Save these instructions

*Your safety is important to us.*

*To reduce the risk of fire, electrical shock, or injury when using your washer adhere to the following basic precautions.*

Read all instructions before using your washer	
<ul style="list-style-type: none"><li>• Flammable fluids (dry-cleaning solvents, kerosene, gasoline, etc.) should not be used or stored in near your washer. Do not add flammable fluids to your wash water. These substances give off vapors that can create a fire hazard or explosion.</li><li>• After starting a cycle, do not reach into the spin basket unless all motion stops.</li><li>• Do not tamper with the controls.</li><li>• The appliance is not intended for use by young children or infirm persons without supervision.</li><li>• Young children should be supervised to ensure that they do not play with the appliance.</li><li>• If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard</li><li>• If the appliance is supplied from a cord extension set or electrical portable outlet device it should be positioned so it is not subjected to splashing or ingress of moisture.</li></ul>	<p>Please ...</p> <ul style="list-style-type: none"><li>• Have only a qualified person install, repair, or replace parts on washer.</li><li>• Maintain washer properly.</li><li>• Protect washer from the weather and keep it where the temperature will not fall below freezing.</li><li>• Do not install the washer at a place of extremely high humidity. It could cause an Electrical shock or a short circuit.</li><li>• Connect washer to the correct outlet, electrical supply, water supply, and drain.</li><li>• Ground washer properly.</li></ul>

## Understanding your responsibilities

- Do not wash fiberglass materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.
- Do not use chlorine bleach and ammonia or acid (such as vinegar or rust remover) in the same wash. Hazardous fumes can form.
- Do not use hot water if standard temperature is over 50°C (122°F). It could cause a deformation of plastic parts.
- Do not spray water on the control panel and back cover of the washer.
- It could cause fire or an electric shock.
- In case of the dual valve model, if you connect only cold water inlet valve, while water temperature is selected as hot or warm, there can be water leakage from unconnected water inlet valve.
- Unplug power supply cord before attempting to service your washer.  
(Understanding your responsibilities)
- This appliance is not to be used by persons (including children) with reduced physical, sensory or metal capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- No accessing of child to vinyl bags which may cause a suffocation.

# INSTALLATION INSTRUCTIONS

## Location of washing machine

Check location where washing machine will be installed. Make sure you have everything necessary for correct installation.

Proper installation is your responsibility.

- Do not place or store your washing machine below 0°C (32°F) to avoid any damage from freezing.
- Install the washing machine on the horizontal solid floor.

	<p>If the washing machine is installed on an unsuitable floor, it could make considerable noise, vibration and cause a malfunction.</p> <p>If washing machine is not level, adjust the front leg(A) up or down for horizontal setting.</p> <ul style="list-style-type: none"> <li>• Earthed electrical outlet(B) is required with 20cm of bottom back of washing machine cabinet(option).</li> <li>• Hot and cold water faucets (C) must be within 1M of the upper back of the washing machine cabinet and provide water pressure 0.3kgf/cm<sup>2</sup> - 8kgf/cm<sup>2</sup> (2.94N/cm<sup>2</sup>-78.4cm<sup>2</sup>).</li> </ul>
--	---

## Drain system

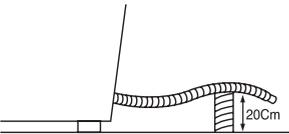
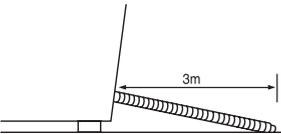
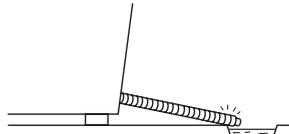
Never forget to install drain hose before operating your washing machine.

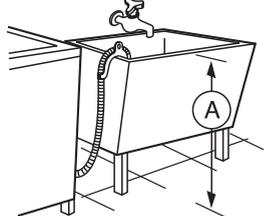
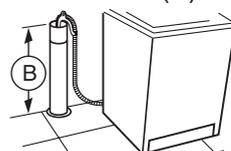
The packing box is opened, there are a drain hose.

Non-Pump Model	Pump Model
<ul style="list-style-type: none"> <li>• Connect the drain hose to the drain outlet at the back side of the washer.</li> </ul>	<ul style="list-style-type: none"> <li>• Connect the drain hose to the drain outlet at the back side of the washing machine.</li> </ul>

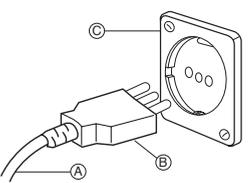
### NOTES

- Carpet does not obstruct the openings for washing machines with ventilation openings in the base.

Non-Pump Model		
<p>① In case that it goes over a door sill. Don't let the height of the drain hose exceed 20cm from the bottom of washer.</p> 	<p>② In case of extending the drain hose. Don't let the total length exceed 3m.</p> 	<p>③ Be careful that the end of the drain hose is not immersed in water.</p> 

Pump Model	
Laundry tub drain system	Standpipe drain system
<ul style="list-style-type: none"> <li>• Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (A)</li> </ul> 	<ul style="list-style-type: none"> <li>• Needs a 3cm minimum diameter standpipe with minimum carry away capacity of 30liters per minute.</li> <li>• Top of tub must be at least 86cm (34inches) high and no higher than 130cm from bottom of washer (B)</li> </ul> 

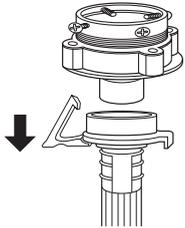
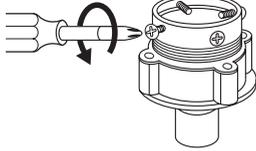
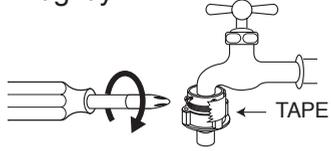
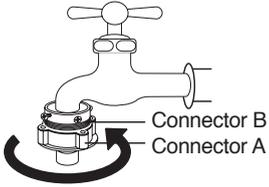
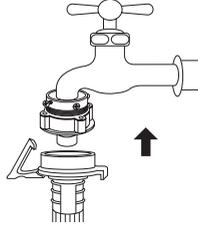
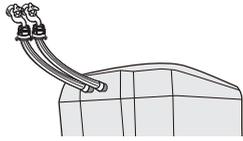
## ELECTRICAL REQUIREMENTS

<b>WARNING</b>	electrical shock hazard: failure to follow these instructions could result in death or serious injury.
<ul style="list-style-type: none"> <li>• Electrical earth is required on this washing machine</li> <li>• If it does not fit the outlet, have a proper outlet installed by a qualified electrician.</li> </ul>	<ul style="list-style-type: none"> <li>• Don't earth to a gas pipe.</li> <li>• Don't change the power supply cord plug.</li> <li>• Check with a qualified electrician if you are not sure the washing machine is properly earthed.</li> </ul>
Recommended earthing method	
	<p>For your personal safety, this washer must be earthed. This washer is equipped with a power supply cord (A) having an earthing plug (B). To minimize possible shock hazard, the cord must be plugged into a mating earthing-type wall receptacle (C). If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have the proper earthed wall receptacle installed by a qualified electrician.</p>

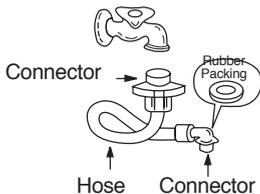
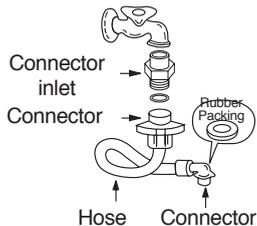
# INLET HOSE CONNECTION

Be careful not to confuse hot water inlet and cold water inlet.  
In using only one water tap or in case of attached one water inlet valve, connect the inlet hose to the cold water inlet valve.

## For Ordinary Tap

<p>① Pull down the collar of the inlet hose to separate it from the water tap adapter.</p> 	<p>② Loosen the four screws properly in fitting into water tap.</p> 	<p>③ Fit the water tap adapter into the water tap and tighten the four screws evenly while pushing up the adapter so that the rubber packing can attach to the water tap tightly.</p> 
<p>④ Remove the tape, and screw connector B into connect A tightly.</p> 	<p>⑤ Connect the inlet hose to the water tap adapter by pulling down the collar of the hose end.</p> 	<p>⑥ Connect the inlet hose adapter of the hose to the water inlet of the washing machine by turning it clockwise to be fixed tightly.</p>  <p>• Please check the rubber packing inside the inlet hose adapter of the hose.</p>

## For Screw-Shaped Tap

<p>① Connect the inlet hose to the water tap by screwing the connector tightly.</p> 	<p>② Connect the connector-inlet supplied if necessary.</p> 	<p>③ Insert the inlet hose adapter into the water inlet of a washing machine and turn it to be fixed.</p>  <p>* Check the packing in the inlet</p>
---	---	---

# OPERATING YOUR WASHER

To obtain the best washing results, you must operate your washing machine properly. This section gives you this important information.

## Preparing clothes for washing

- |   |  |
|---|--|
| <ul style="list-style-type: none"><li>• Close zippers, snaps, and hooks to avoid snagging other items. Remove pins, buckles, and other hard objects to avoid scratching the washing machine interior.</li><li>• Empty pockets and turn them inside out.</li></ul> | <ul style="list-style-type: none"><li>• Turn down cuffs and turn synthetic knits out to avoid pilling.</li><li>• Tie strings and sashes so they will not tangle.</li><li>• Treat spots and stains. (see "Removing stains" on page16)</li></ul> |
|---|--|

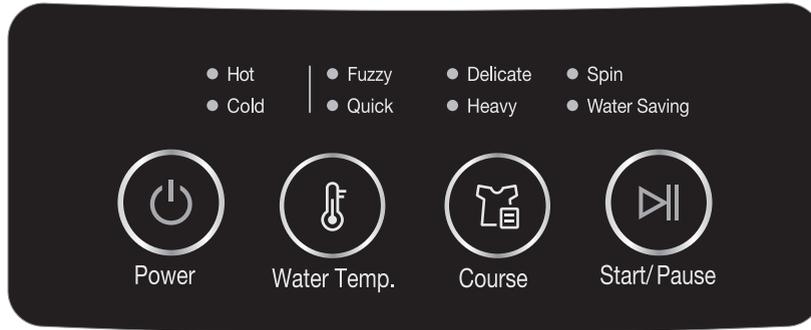
## Sorting

- |   |
|---|
| <ul style="list-style-type: none"><li>• Separate heavily soiled items from, lightly soiled ones, even if they would normally be washed together.</li><li>• Separate dark colors from light colors, colorfast items from non-colorfast item.</li></ul> |
|---|

## Loading

- |  |   |
|--|---|
| <ul style="list-style-type: none"><li>• Drop items into washing machine loosely. Items should move easily through wash water for best cleaning and wrinkle-free results.</li><li>• Load washing machine properly and select correct load size setting. Overloading and selecting a setting too small for the wash load can:<ul style="list-style-type: none"><li>- cause poor cleaning</li><li>- increase wrinkling</li><li>- create excessive lint</li><li>- wear out items faster (because of pilling)</li></ul></li></ul> | <ul style="list-style-type: none"><li>• Mix large and small items in each load. Load evenly to maintain washing machine balance. An off balance load can make the washing machine vibrate during spin.</li><li>• Reduce wash time when using a small load size setting. Loads with only a few small items need less wash time.</li><li>• Use a large load size setting to reduce wrinkling with permanent press clothes and some synthetic knits. These items should have more room to move in the water than heavy items (towels, jeans)</li></ul> |
|--|---|

# THE FUNCTIONS OF THE CONTROL PANEL



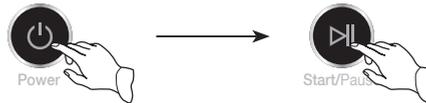
 Power	<ul style="list-style-type: none"> <li>• Press this button to turn the power 'ON' or 'OFF'.</li> </ul>
 Water Temp.	<ul style="list-style-type: none"> <li>• This button can be used to add water level by 1 level and add rinse by 1 level.</li> <li>• As the button is pressed, the program will be repeated. rinse+ → water+</li> </ul>
 Course	<ul style="list-style-type: none"> <li>• It can be used to select the full-automatic program.</li> <li>• As the button is pressed, program will be selected by following order: Fuzzy → Quick → Delicate → Heavy → Spin → Water Saving</li> </ul>
 Start/Pause	<ul style="list-style-type: none"> <li>• Operation and temporary stop is repeated as it is pressed.</li> <li>• When you want change program in operating; press the "START/PAUSE" button → select the program that you want to change → press the "START/PAUSE" button again.</li> </ul>

# WASHING PROCEDURE AND COURSE SELECTION

## FULL AUTOMATIC COURSE

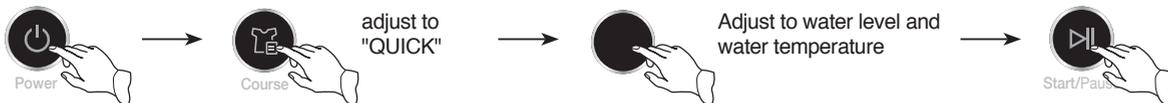
### 1. Fuzzy PROGRAM(SENSOR) ;

- This selection is for general washing except extraordinary clothes.
- Artificial brain sensor selects properly the various kind of washing condition such as washing time, rinse times, spin time and water level.
- Procedure to press the button.



### 2. QUICK PROGRAM ;

- This selection is useful to reduce water consumption and washing time for less dirty clothes.
- Procedure to press the button.



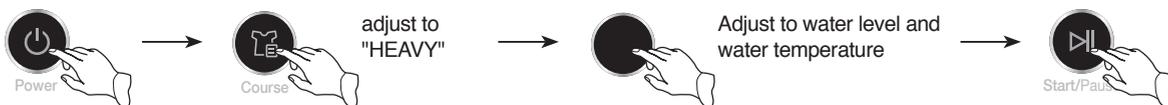
### 3. DELICATE PROGRAM ;

- This selection is effective for delicate and washable laundry easily damaged (silk, satin, etc). (1.2kg's limitation for one-time-wash)
- Do not put leather clothes or chamois clothes into the washing tub for washing.
- Please use the neutral detergents only.
- The water temperature is fixed to 'COLD'.
- The water level is not selected.



### 4. HEAVY PROGRAM ;

- This selection is effective for heavily soiled clothes. (jeans, bed clothes, blanket etc)
- Procedure to press the button;

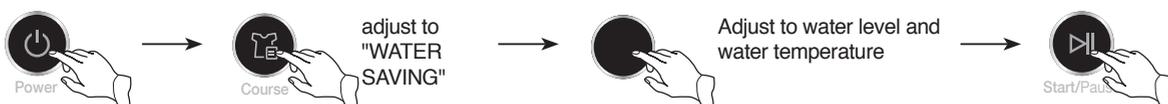


### 5. SPIN PROGRAM ;

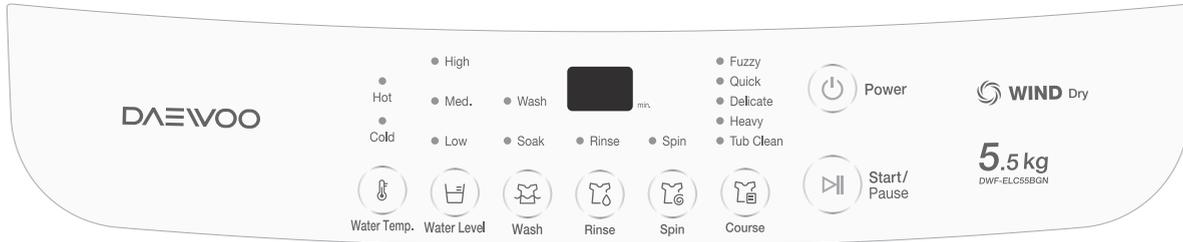
- This selection is effective for only spin process.

### 5. WATER SAVING PROGRAM ;

- This selection is effective for heavily soiled clothes.
- If you want to smart wash, press the program button to adjust to "SMART WASH".
- Procedure to press the button.



# THE FUNCTIONS OF THE CONTROL PANEL



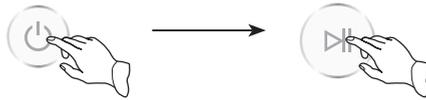
 Power	<ul style="list-style-type: none"> <li>• Press this button to turn the power 'ON' or 'OFF'.</li> </ul>
 Water Temp.	<ul style="list-style-type: none"> <li>• It can be used to choose water temperature to be supplied.</li> <li>• As the button is pressed, water temperature will be repeated. COLD → COLD+HOT → HOT</li> <li>• In case of the single valve model, there is no wash temperature selector function.</li> </ul>
 Water Level	<ul style="list-style-type: none"> <li>• It can be used to adjust amount of water according to the size of the load to be washed.</li> <li>• As the button is pressed, water level is selected by MID → HIGH → LOW</li> </ul>
 Wash Rinse Spin	<ul style="list-style-type: none"> <li>• It is the button for the partial process or the combination of each process ( wash, rinse, spin ) ( See page 10 )</li> </ul>
 Course Spin	<ul style="list-style-type: none"> <li>• If you want to change wash time, rinse time, spin time , you must press this button after selecting each process by the process button. Also, this button can be used to spin only. ( See page 10 )</li> </ul>
 Course	<ul style="list-style-type: none"> <li>• It can be used to select the full-automatic program.</li> <li>• As the button is pressed, program will be selected by following order: FUZZY → QUICK → DELICATE → HEAVY → TUB CLEAN</li> </ul>
 Start/ Pause	<ul style="list-style-type: none"> <li>• Operation and temporary stop is repeated as it is pressed.</li> <li>• When you want change program in operating; press the "START/PAUSE" button → select the program that you want to change → press the "START/PAUSE" button again.</li> </ul>

# WASHING PROCEDURE AND COURSE SELECTION

## FULL AUTOMATIC COURSE

### 1. FUZZY PROGRAM(SENSOR) ;

- This selection is for general washing except extraordinary clothes.
- Artificial brain sensor selects properly the various kind of washing condition such as washing time, rinse times, spin time and water level.
- Procedure to press the button.



### 2. QUICK PROGRAM ;

- This selection is useful to reduce water consumption and washing time for less dirty clothes.
- Procedure to press the button.



### 3. DELICATE PROGRAM ;

- This selection is effective for delicate and washable laundry easily damaged (silk, satin, etc). (1.2kg's limitation for one-time-wash)
- Do not put leather clothes or chamois clothes into the washing tub for washing.
- Please use the neutral detergents only.
- The water temperature is fixed to 'COLD'.
- The water level is not selected.



### 4. HEAVY PROGRAM ;

- This selection is effective for heavily soiled clothes. (jeans, bed clothes, blanket etc)
- Procedure to press the button;



### 5. TUB CLEAN PROGRAM ;

- It is useful to clean the tub.
- It is possible to choose the water level.
- It is useful to use the oxygen bleach (all-fabric bleach). (Do not use the chlorine bleach.)
- If you clean the tub once a month, it is possible to keep the tub clean all the time.



## PARTIAL PROCESS & COMBINATION

 Power	<ul style="list-style-type: none"> <li>• Press the Power button first.</li> </ul>
 Wash	<p><b>WASH TIME CONTROL</b></p> <ul style="list-style-type: none"> <li>• As the control button is pressed, wash time will be repeated as 3 → 6 → 9 → 12 → 15 → 18 → 21 → soak 30 → soak 60 → 0 → 3min.</li> <li>• If you don t want wash process, you must adjust wash time to 0 min.</li> </ul>
 Rinse	<p><b>RINSE TIMES CONTROL</b></p> <ul style="list-style-type: none"> <li>• As the control button is pressed, Rinse time will be repeated as following; 2 → 3 → 4 → 0 → 1 time(s)</li> <li>• If you don t want Rinse process, you must adjust Rinse times to 0 times.</li> </ul>
 Spin	<p><b>SPIN TIME CONTROL</b></p> <ul style="list-style-type: none"> <li>• As the control button is pressed, spin time will be repeated as following; 5 → 7 → 9 → 0 → 1 → 3min.</li> <li>• If you don t want spin process, you must adjust spin time to 0 min.</li> </ul>
 Start/ Pause	<ul style="list-style-type: none"> <li>• Press the Start button.</li> </ul>

## CONVENIENT OPERATION FOR SPIN ONLY

- If you want spin only, it is convinient to operate the button as following.

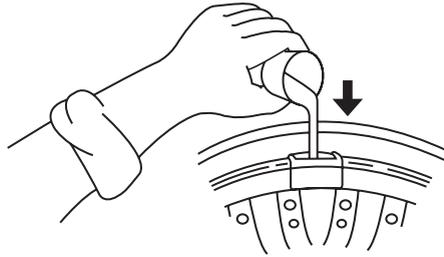


# GENERAL PROCEDURE FOR OPERATION

## 1. OPTIONAL STEP

If desired, add measured liquid fabric softener to the softener inlet.

- Pour liquid fabric softener into the dispenser using the amount recommended on the package. Avoid dripping or spilling any fabric softener on the load.



Softener inlet  
(Symbol)

- The dispenser is for liquid fabric softener use only.
2. Close the washer lid (door).
  3. Press the power button.
  4. Select the cycle. The full automatic cycle has five setting;  
FUZZY -> QUICK -> DELICATE -> HEAVY -> WATER SAVING(See page 9)  
FUZZY -> QUICK -> DELICATE -> HEAVY -> TUB CLEAN(See page 11)
  5. Press the START/PAUSE button.

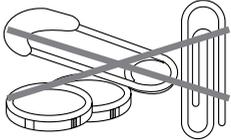
### NOTE

- If you open the Door(Lid) When wash and rinse processing, the PULSATOR is not working with "LE" signal on the PCB and Buzzer alarm.
- And if close the Door(Lid), the remain process will be done continuously.

# CARING FOR YOUR WASHER

Proper care of your washer can extend its life. This section explains how to care for your washer properly and safely.

## Cleaning your washer

<b>Exterior</b>	<b>Interior</b>
<p>Wipe up detergent, bleach, and other spills with a soft, damp cloth or sponge as they occur. Occasionally wipe the outside of the washer to keep its looking like new one.</p> 	<p>Clean interior with 250ml of chlorine bleach mixed with 500ml of detergent. Run washer through a complete cycle. Repeat this process if necessary.</p>
<p>Do not put sharp or metal object in your washer, or they can damage the finish. Check all pockets for pins, clips, money, bolts, nuts, etc. Do not lay these objects in your washer after emptying pockets.</p> 	

## Winter storage or moving care

Install and store your washer where it will not freeze. Because some water may stay in the hoses, freezing can damage your washer.

If storing or moving your washer during freezing weather, winterize it.

<b>To winterize washer</b>	<b>To use washer again</b>
<ul style="list-style-type: none"> <li>• Turn off water faucet.</li> <li>• Disconnect and drain water inlet hoses</li> <li>• Run washer on a drain and spin setting (see page 12) for 1 minute.</li> <li>• Unplug the power supply cord.</li> </ul>	<ul style="list-style-type: none"> <li>• Flush water pipes and hoses.</li> <li>• Reconnect water inlet hoses.</li> <li>• Turn on water faucet.</li> <li>• Reconnect power supply cord.</li> </ul>

## Non-use or vacation care

Operate your washer only when you are at home.

If will be on vacation or not using your washer for an extended period of time, you should:

- Unplug the power supply cord or turn off electrical power to the washer.
- Turn off the water supply to the washer .

This helps avoid accidental flooding (due to a water pressure surge) while you are away.

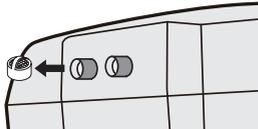
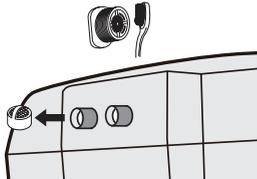
# HOW TO CLEAN THE FILTER

## Cleaning the Lint Filter

<p>① Pull the Filter frame up-ward.</p> 	<p>② Turn the lint filter inside out, wash to the lint off with water</p> 	<p>③ Return the filter as it was, and insert the filter frame into the slot</p> 
---	---	---

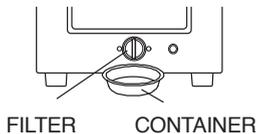
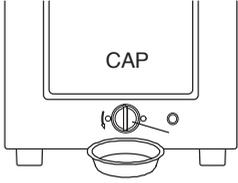
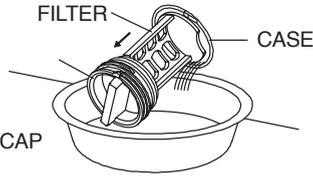
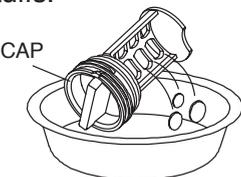
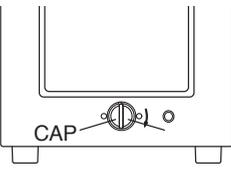
## Cleaning the water inlet filter

• Clean the filter when water leaks from, the water inlet.

<p>① Pull the power plug out before cleaning it.</p>	<p>② Turn off the water supply to the washer and sperate the inlet hose.</p> 	<p>③ Pull the inlet filter out.</p> 	<p>④ Remove the dirt from the inlet filter with a brush.</p> 
--	---	---	---

## Cleaning the drain filter

- In case "Pump-Model" drain hose, this filter's equipped at the back side of washer.
- This drain filter is to screen the foreign stuffs such as threads, coins, pins, buttons etc...
- If the drain filter is not cleaned at proper time (every 10 times of use), Drain problem could be caused. see page.

<p>① Put down the remained water in the hose. And put a container under the filter to collect water.</p>  <p>FILTER CONTAINER</p>	<p>② Turn the cap counter clockwise.</p>  <p>CAP</p>	<p>③ Pull out the filter assembly off the case.</p>  <p>FILTER CASE CAP</p>
<p>④ Clean the drain filter removing the foreign stuffs.</p>  <p>CAP</p>	<p>⑤ Put the filter into the case. And turn the cap to adjust the prominence of the filter to the hole of the case.</p>  <p>STOPPER FILTER CASE CAP</p>	<p>⑥ Turn the cap clockwise tightly.</p>  <p>CAP</p>

# REMOVING STAINS

Stained, heavily-soiled, or greasy items may need to be prewashed or soaked for best results. Soaking helps remove protein-type stains like blood, milk, or grass. Prewashing helps loosen soil before washing.

## Stain removal rules

- Use warm water for soaking or prewashing stained laundry. Hot water can set stains.
- Most stains are easier to remove when they are fresh. Old or set stains may not come out.
- Before treating any stain, find out what kind of stain it is, how old the stain is, what kind of fabric it is, and if the fabric is color fast. (Check the care label)
- Washing and drying can set some stains.
- Start with cold or warm water, hot water can set some stain.
- When bleach is recommended, use a bleach that is safe for the fabric.
- Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off fabric instead of through it.

## Stain removal guide

<b>STAIN</b>	<b>TO REMOVE</b>
Blood	Rinse immediately in COLD water. If stain remains, soak in cold water with an enzyme prewash.
Chewing gum	Use ice in plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Cocoa, Chocolate	Sponge with COLD water and soak in an enzyme prewash. If stains persist, rub in a little detergent and rinse in cold water.
Coffee	Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type.
Cream/Milk Ice cream	Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits.
Deodorant	Rub affected area with white vinegar and then rinse out in COLD water. Sponge with white spirits. Treat stiffened areas with enzyme prewash.
Egg	Soak in a COLD enzyme prewash, rinse and wash normally.
Fabric/Softener	Rub affected area with bar soap and wash normally.
Fruit stains	Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and wash normally.
Grass	Sponge with white spirits. Rub in an enzyme prewash and wash as normally.
Grease and oil	Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid. Wash normally.
Iron or rust	Apply lemon juice and salt and place in the sun. Wash normally.
Lipstick	Sponge with white methylated spirits and wash normally.
Mildew	Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and the fabric allows, use a bleach.
Mud	Brush off any dry mud. Rinse in cold water. If stain persists rub in a little detergent and wash normally.
Paint-oil based	Scrape off any fresh paint and sponge with a non flammable dry cleaning fluid and wash normally.
Paint-water based	Treat while still wet, rinse in WARM water and wash normally.
Scorch marks	Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron.

# TROUBLE SHOOTING

Most problems are easily solved if you understand the cause.

Check the following list for problem before calling for service.

If error mode such as **UE**, **OE**, **IE** were displayed on the control part, in this case, how to solve these problem is first open and close the Door(Lid), and then press START/HOLD button.

## Before calling for service, check these

PROBLEM	CHECK POINT
<ul style="list-style-type: none"> <li>The washer will not operate at all.</li> </ul>	<ul style="list-style-type: none"> <li>Is there a power failure?</li> <li>Is the power cord correctly connected to an electric outlet?</li> <li>Is the electric fuse broken?</li> <li>Did you turn on the power?</li> <li>Did you press Start/Hold button?</li> <li>Is there correct amount of water in the tub?</li> </ul>
<ul style="list-style-type: none"> <li>Water is not supplied; If water supply is not finished within 20 minutes, the lamp <b>IE</b> will light up, and the buzzer will sound to indicate a problem.</li> </ul>	<ul style="list-style-type: none"> <li>Did you connect the inlet hose and open the water tap?</li> <li>Is the inlet hose or the water tap frozen?</li> <li>Is the water supply shut off?</li> <li>Does foreign matter block up the inlet hose filter?</li> </ul>
<ul style="list-style-type: none"> <li>The washer will not drain; If the drain is not finished within selected time, lamp <b>OE</b> will light up, and the buzzer will sound to indicate a problem.</li> </ul>	<ul style="list-style-type: none"> <li>Is the drain hose frozen or blocked up by dirt?</li> <li>Is the drain hose kinked or deformed?</li> <li>Is the end of the drain hose immersed in water?</li> <li>Is there excessive dirt inside the pump housing?</li> </ul>
<ul style="list-style-type: none"> <li>The washer will not spin; during spin and the tub becomes unbalanced, the spin operation will be interrupted, and then this unbalanced condition will be corrected by following operation: WATER SUPPL → RINSE → DRAIN However if the unbalanced condition is unchanged despite repeating the above operation, the lamp <b>UE</b> will light up, and the buzzer will sound to indicate a problem.</li> </ul>	<ul style="list-style-type: none"> <li>Is the clothe in the tub collected on one side?</li> <li>Is the washing machine installed on an uneven floor or is the vibration serious?</li> <li>Is the lid open? (The lamp <b>LE</b> will light up in this case.)</li> </ul>
<p><b>These cases are not malfunctions</b></p> <ul style="list-style-type: none"> <li>The sound "wing" heard during water supply is the operating sound made by the water inlet valve.</li> <li>The sound "sha" heard in stopping the tub is the sound that comes from the autobalancer of the tub.</li> </ul>	

# SPECIFICATION

MODEL NO.	DWF-ELC55BGN / DWF-ELC55GPN
Dimension (WxHxD, mm)	525 x 948 x 535
Unit Weight	26Kg
Standard Water Consumption	130 ℓ
Standard Water Level	• HIGH (58 ℓ ) • MED (44 ℓ ) • LOW (31 ℓ )
Operating Water Pressure	29kPa ~ 784kPa (0.3kgf/cm <sup>2</sup> ~ 8kgf/cm <sup>2</sup> )



# ABOUT THIS MANUAL

**VISION CREATIVE, INC.**

서울 종로구 통의동  
6번지 이룸빌딩 4층

담 당	김용식 님		
브 랜 드	DAEWOO	언 어	영어
F. MODEL	ELC 사용설명서		
B. MODEL	DWF-ELC55BGN / DWF-ELC55GPN		
B U Y E R	호주향		
M E M O	총 18p (192 x 260)		
16.07.07-표지, 7p, 8p, 9p, 10p, 11p, 13p, 18p _ 8p 16.07.08-10p, 11p, 12p _ 3p			

**NO NEED PRINT**