

LIVING&CO

L+C 4 SLICE TOASTER LONG SS/L+C 4 SLICE LONG SS CHAMPAGNE



INSTRUCTION MANUAL

MODEL:LT4S/LT4LB

AFTER SALES SUPPORT

 **NZ** 0800 422 274

Read these instructions carefully before using your toaster, and keep it carefully.

If you follow the instructions, your toaster will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY


IMPORTANT SAFEGUARD

1. Read all instruction before using.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so


as to avoid injuries

16. Don't use the appliance outdoors.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
21. The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.
22. Save these instructions.
23. Never operate the appliance with wet hands.
24. It is recommended to have a residual current device (safety switch) installed by qualified electrician to provide additional safety protection when using all electrical appliances.

KNOW YOUR TOASTER

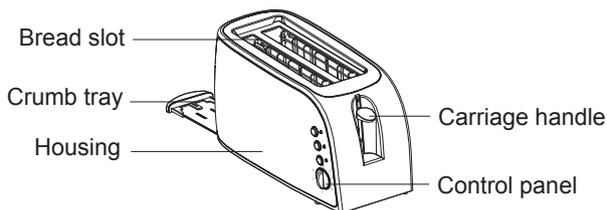

CONTROL PANEL

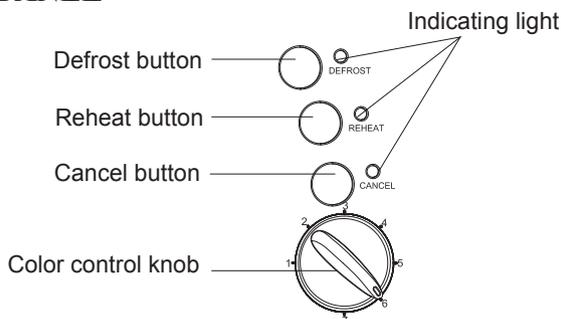

FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

OPERATION:

- Put bread slice into the bread slot, it can be inserted four slices at most every time.
Note: 1. Make sure the crumb tray is completely positioned in place before using.
- Plug the power cord into the outlet.
- Set color control knob to your desired color. There is 7-position level, the lowest is white and the highest is dark. The bread slice can be toasted to golden color at the position of "4".
Note: 1) Toasting color for one slice is darker than that for double bread at the same level.
2) If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.
- Press carriage handle down vertically until it is positioned in place, and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will be automatically pop up.

Note: The carriage handle can only be latched when the appliance connects to the power supply.

5. During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time.
6. If the bread has been taken out from refrigerator. Press carriage handle down vertically until it is positioned in place, then press **Defrost** button and the lamp of **Defrost** will be illuminated. In this mode it will be toasted to your desired color.
7. If you want to reheat the cold toasted bread. Press carriage handle down vertically until it is positioned in place, then press the **Reheat** button and the lamp of **Reheat** will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.
8. Once the bread have been toasted to the preset color, the carriage handle will automatically pop up, also you can lift the carriage handle a little to remove the bread readily (see Fig. 1).

 


Fig. 1

CAUTION:

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first, Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.



LIVING&CO

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.